
## SCIENTIFIC MICRO SYSTEMS OMTI 5520, OMTI 5527

Data bus: Size: Hard drives supported:

Floppy drives supported: Maximum heads/cyl.: 8-bit, ISA Half-length, full height card OMTI 5520:Two MFM ST506/ST412 drives OMTI 5527:Two RLL ST506/ST412 drives None

16 heads and 2048 cylinders

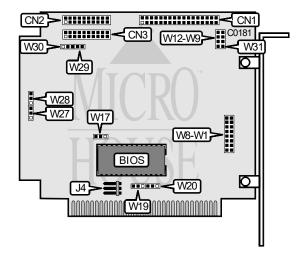

CONNECTIONS		
Function	Location	
34-pin control cable connector-hard drive	CN1	
20-pin data cable connector-drive 0	CN2	
20-pin data cable connector-drive 1	CN3	
6-pin DC power connector	J4	

Continued on next page . . .

Copyright © 1991, 1992, 1993 by Micro House Int'l (800) 926-8299. Research Dept. (303) 443-389.

## SCIENTIFIC MICRO SYSTEMS OMTI 5520, OMTI 5527

... continued from previous page

USER CONFIGURABLE SETTINGS		
Function	Location	Setting
í BIOS enabled	W7	open
BIOS disabled	W7	closed
í BIOS base address is C8000h	W8	open
BIOS base address is CA000h	W8	closed
í Drive 0 soft sectored	W11	open
Drive 0 hard sectored	W11	closed
í Drive 1 soft sectored	W14	open
Drive 1 hard sectored	W14	closed
Not used	WP9	
Drive 0 is a removable drive ;drive 1 is a fixed drive	W10	closed
(OMTI 5527 only, JP10-11 are not used on the 5520)	W11	open
Drive 0 & 1 are both hard sectored	W10	open
(OMTI 5527 only, JP10-11 are not used on the OMTI	W11	closed
5520.)		
í Factory configured - do not alter	W12	N/A
í Not documented	W17,19,20, 27,28,29,30	N/A

I/O PORT ADDRESS			
Address	Jumper W5	Jumper W6	
í 320h	open	open	
324h	closed	open	
328h	open	closed	
32Ch	closed	closed	

## MISCELLANEOUS TECHNICAL NOTES

W1 through W4 are used to configured the drive type as supported by the BIOS. To support most of the drives on the market, there are several different BIOS's offered. The different BIOS drive type tables are listed with the OMTI 5510; The settings are the same for the 5520 and the 5527

Copyright © 1991, 1992, 1993 by Micro House Int'I (800) 926-8299. BBS (303) 443-9957.