ULTRASTOR CORPORATION ULTRA22C


Data bus: 32 bit, EISA

Size: Full-length, half-height card

Hard drives supported: Two ESDI drives

Two 360KB, 720KB, 1.2MB, or 1.44MB

Floppy drives supported: Maximum heads/cyl.: 16 heads and 1024 cylinders

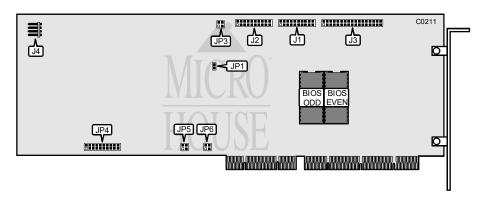

The two expansion board connectors (along the top and bottom) are not depicted in this illustration.

CONNECTIONS		
Function	Location	
20-pin data cable connector-drive 0	J1	
20-pin data cable connector-drive 1	J2	
34-pin control cable connector-hard drive	J3	
4-pin connector-drive active LED	J4	

Continued on next page . . .

Copyright © 1991, 1992, 1993 by Micro House Int'l (800) 926-8299. Research Dept. (303) 443-389.

ULTRASTOR CORPORATION ULTRA22C

. . . continued from previous page

FACTORY CONFIGURED SETTINGS All Jumpers on the 22C are for factory use and should remain at the factory d fault settings.		
Function	Location	Setting
í Factory configured - do not alter	JP1	closed
í Factory configured - do not alter	JP3	open
í Factory configured - do not alter	JP4/jumper 1	closed
í Factory configured - do not alter	JP4/jumpers 2 -5	open
í Factory configured - do not alter	JP4/jumper 6	closed
í Factory configured - do not alter	JP4/jumper 7 & 8	open
í Factory configured - do not alter	JP4/jumper 9	closed
í Factory configured - do not alter	JP4/jumper 10	open
í Factory configured - do not alter	JP5/jumper 1	open
í Factory configured - do not alter	JP5/jumper 2	closed
í Factory configured - do not alter	JP6/jumper 1	open
í Factory configured - do not alter	JP6/jumper 2	closed

Copyright © 1991, 1992, 1993 by Micro House Int'l (800) 926-8299. BBS (303) 443-9957.