

CONNECTIONS	
34-pin control cable connector-hard drive	CN1
20-pin data cable connector-drive 0	CN2
20-pin data cable connector-drive 1	CN3
34-pin data cable connector-floppy drive (NCL 5475 only)	CN4
4-pin connector-drive active LED	CN5

Continued on next page . . .

Q2/94

Copyright © 1991, 1992, 1993 by Micro House Int'l (800) 926-8299. Research Dept. (303) 443-389.

NCL AMERICA NCL 5475, NCL 5476

... continued from previous page

	USER CONFIGURABLE SETTINGS			
	Function	Location	Setting	
í	Hard drive port address is 1F0-1F7h	JP1	pins 1 & 2 closed	
	Hard drive port address is 170-177h	JP1	pins 2 & 3 closed	
í	Floppy drive port address is 3F2-3F7h (5475 only)	JP2	closed	
	Floppy drive port address is 372-377h (5475 only)	JP2	open	
Í	Unit select turn on the LED	JP6	open	
	Drive select turn on the LED	JP6	closed	
Í	Hard Drive Interrupt is IRQ14 (Hard-wired)	JP9	pins 2 & 3 closed	
	Hard Drive Interrupt is IRQ15	JP9	pins 1 & 2 closed	

MISCELLANEOUS TECHNICAL NOTES

Jumpers JP3, JP4, JP5, JP7, and JP8 are factory configured in the open position - do not alter.

Copyright © 1991, 1992, 1993 by Micro House Int'I (800) 926-8299. BBS (303) 443-9957.