PROMISE TECHNOLOGY, INC. DC4030VL

			Q2/94
Data bus: Size: Hard drive supported: Floppy drives supported:	32-bit, VL-bus Three/quarter-length, full-he Four IDE (AT) Interface driv Four 360KB, 720KB, 1.2MB	res	
	JP1	_	_
BANK 1			
BARRANGE BANK 0		J4	
JP4	HOUSE	JP2	Ē
	CONNECTIO	NS	
	CONNECTIO Function	NS	Location
34-pin control cable conn		INS	Location J1
	Function		
	Function ector - floppy drive BUS-0 ector - floppy drive BUS-1	NS	J1
34-pin control cable conn	Function ector - floppy drive BUS-0 ector - floppy drive BUS-1 connector IDE-0	NS	J1 J2
34-pin control cable conn 40-pin IDE (AT) Interface	Function ector - floppy drive BUS-0 ector - floppy drive BUS-1 connector IDE-0 connector IDE-1	NS	J1 J2 J3
34-pin control cable conn 40-pin IDE (AT) Interface 40-pin IDE (AT) Interface	Function ector - floppy drive BUS-0 ector - floppy drive BUS-1 connector IDE-0 connector IDE-1 tive LED		J1 J2 J3 J4
34-pin control cable conn 40-pin IDE (AT) Interface 40-pin IDE (AT) Interface 4-pin connector - drive ac	Function ector - floppy drive BUS-0 ector - floppy drive BUS-1 connector IDE-0 connector IDE-1 tive LED USER CONFIGURABL	E SETTINGS	J1 J2 J3 J4 JP1
34-pin control cable conn 40-pin IDE (AT) Interface 40-pin IDE (AT) Interface 4-pin connector - drive ac Fu	Function ector - floppy drive BUS-0 ector - floppy drive BUS-1 connector IDE-0 connector IDE-1 tive LED	E SETTINGS Location	J1 J2 J3 J4 JP1 Setting
34-pin control cable conn 40-pin IDE (AT) Interface 40-pin IDE (AT) Interface 4-pin connector - drive ac Fu	Function ector - floppy drive BUS-0 ector - floppy drive BUS-1 connector IDE-0 connector IDE-1 tive LED USER CONFIGURABL	E SETTINGS Location JP2	J1 J2 J3 J4 JP1 Setting Closed
34-pin control cable conn 40-pin IDE (AT) Interface 40-pin IDE (AT) Interface 4-pin connector - drive ac Fu Fu í Floppy drive enabled Floppy drive disabled	Function ector - floppy drive BUS-0 ector - floppy drive BUS-1 connector IDE-0 connector IDE-1 tive LED USER CONFIGURABL	E SETTINGS Location JP2 JP2	J1 J2 J3 J4 JP1 Setting Closed Open
34-pin control cable conn 40-pin IDE (AT) Interface 40-pin IDE (AT) Interface 4-pin connector - drive ac Fu	Function ector - floppy drive BUS-0 ector - floppy drive BUS-1 connector IDE-0 connector IDE-1 tive LED USER CONFIGURABL nction	E SETTINGS Location JP2	J1 J2 J3 J4 JP1 Setting Closed

 VL-bus ID3 signal support disabled*
 JP4

 *Note: Open JP4 if your motherboard is 50MHz 486 and does not support ID3 signal.

MISCELLANEOUS TECHNICAL NOTES At least one pair SIMM of memory modules (256KB, 1MB, or 4MB) of the same size must be installed in Bank 0 in order for the controller to function.

Copyright © 1991, 1992, 1993 by Micro House Int'l (800) 926-8299. Research Dept. (303) 443-3389