Q4/94


## ADAPTEC, INC. ACB-2322 (VERSION 1)

Data bus: 16-bit, ISA

Full-length, full-height card Size:

Hard drive supported:

Two RLL ESDI
Two 360KB, 720KB, 1.2MB, or 1.44MB drives Floppy drives supported:

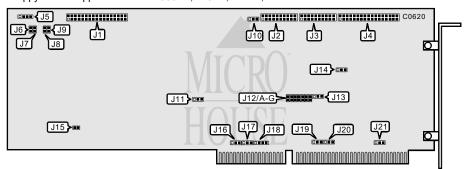

CONNECTIONS		
Function	Location	
34-pin control cable connector - floppy drive	J1	
20-pin data cable connector - drive 2	J2	
20-pin data cable connector - drive 1	J3	
34-pin control cable connector - hard drive	J4	
4-pin connector - drive active LED	J5	
Serial monitor output	J13	

USER CONFIGURABLE SETTINGS		
Function	Location	Setting
í Factory configured - do not alter	J6	N/A
í Factory configured - do not alter	J7	N/A
í Factory configured - do not alter	J8	N/A
í Factory configured - do not alter	J9	N/A
í Factory configured - do not alter	J10	N/A
í BIOS address is C8000-CBFFFh	J11	Pins 1 & 2 closed
BIOS address is CC000-CFFFFh	J11	Pins 2 & 3 closed
BIOS disabled	J11	All pins open
í Hard drive address is 1F0-1F7h	J12/jumper A	Open
Hard drive address is 170-177h	J12/jumper A	Closed
í Floppy drive address is 3F0-3F7h	J12/jumper B	Open
Floppy drive address is 370-377h	J12/jumper B	Closed
Zero wait state enabled	J12/jumper C	Open
Zero wait state disabled	J12/jumper C	Closed

Continued on next page . . .

## ADAPTEC, INC. ACB-2322 (VERSION 1)

. . . continued from previous page

USER CONFIGURABLE SETTINGS		
Function	Location	Setting
Hard drive recal function enabled	J12/jumper D	Open
Hard drive recal function disabled	J12/jumper D	Closed
í Factory configured - do not alter	J12/jumper E	N/A
Serial monitor mode disabled	J12/jumper F	Open
Serial monitor mode enabled	J12/jumper F	Closed
í Factory configured - do not alter	J12/jumper G	N/A
í Test point	J14	All pins open
í Test point	J15	Open
í Factory configured - do not alter	J16	N/A
í Factory configured - do not alter	J17	N/A
Hard drive IRQ14 selected	J18	Pins 1 & 2 closed
Hard drive IRQ15 selected	J18	Pins 2 & 3 closed
Floppy drive DACK2 selected	J19	Pins 1 & 2 closed
Floppy drive DACK3 selected	J19	Pins 2 & 3 closed
í Floppy drive IRQ6 selected	J20	Pins 1 & 2 closed
Floppy drive IRQ10 selected	J20	Pins 2 & 3 closed
í Floppy drive DRQ3 selected	J21	Pins 1 & 2 closed
Floppy drive DRQ2 selected	J21	Pins 2 & 3 closed
Note: J18 pins 3 & 4 are not used and should never be closed.		