
OLIVETTI ASC-1 (BK09A)

Data bus: Size: Hard drive supported: Floppy drives supported: 16-bit ISA Half-length, full-height card Up to seven SCSI devices None

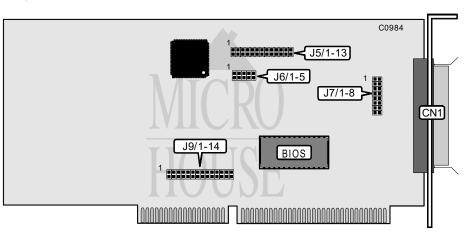

CONNECTIONS	
Function	Location
50-pin SCSI connector - external	CN1

USER CONFIG	SURABLE SETTINGS	
Function	Location	Setting
í Synchronous Negotiation disabled	J5/1	Open
Synchronous Negotiation enabled	J5/1	Closed
í SCSI parity check enabled	J5/2	Open
SCSI parity check disabled	J5/2	Closed
í Factory configured - do not alter	J5/3	Open
í On-board BIOS enabled	J6/1	Closed
On-board BIOS disabled	J6/1	Open
í Factory configured - do not alter	J6/2	N/A
í Factory configured - do not alter	J6/3	N/A
í Factory configured - do not alter	J6/4	N/A
í Auto-sense disabled	J6/5	Closed
Auto-sense enabled	J6/5	Open
í Factory configured - do not alter	J7/1	N/A

Continued on next page. . .

Copyright © 1991, 1992, 1993 by Micro House Int'l (800) 926-8299. Research Dept. (303) 443-3389

Q3/96

OLIVETTI ASC-1 (BK09A)

... continued from previous page

BIOS ADDRE	SS SELECTION (MAINBOARDS M48	0-10 AND M480-2 ONLY)
Address	J7/7	J7/8
C8000-CBFFFh	Closed	Closed
CC000-CFFFFh	Closed	Open
D8000-DBFFFh	Open	Closed
DC000-DFFFFh	Open	Open

	BASE I/O ADDR	ESS SELECTION	
Address	J7/2	J7/3	J7/4
130h	Closed	Open	Closed
134h	Open	Open	Closed
230h	Closed	Closed	Open
234h	Open	Closed	Open
í 330h	Closed	Open	Open
334h	Open	Open	Open

WAIT STATE SELEC	TION (MAINBOARDS M480-10 AI	ND M480-20 (NLY)
Setting	J7/5	J7/6
í IOCHRDY signal disabled	Open	Open
100 ns	Closed	Open
200 ns	Open	Closed
300 ns	Closed	Closed

	SCSI ID S	ELECTION	
SCSI ID	J5/4	J5/5	J5/6
0	Closed	Closed	Closed
1	Open	Closed	Closed
2	Closed	Open	Closed
3	Open	Open	Closed
4	Closed	Closed	Open
5	Open	Closed	Open
6	Closed	Open	Open
í 7	Open	Open	Open

Continued on next page. . .

Copyright @ 1991, 1992, 1993 by Micro House Int'l (800) 926-8299. BBS (303) 443-9957

OLIVETTI ASC-1 (BK09A)

. . .continued from previous page

		A	T INTERR	UPT CHAI	NNEL SEL	ECTION			Ū
IRQ	J5/9	J5/10	J5/11	J9/9	J9/10	J9/11	J9/12	J9/13	J9/14
9	Open	Open	Open	Close d	Open	Open	Open	Open	Open
10	Closed	Open	Open	Open	Close d	Open	Open	Open	Open
í 11	Open	Closed	Open	Open	Open	Close d	Open	Open	Open
12	Closed	Closed	Open	Open	Open	Open	Close d	Open	Open
14	Open	Open	Close d	Open	Open	Open	Open	Close d	Open
15	Closed	Open	Close d	Open	Open	Open	Open	Open	Close d

		DMA	SELECTION			
Channel	J5/7	J5/8	J9/1	J9/2	J9/3	J9/4
0	N/A	N/A	Closed	Open	Open	Open
í 5	Open	Closed	Open	Closed	Open	Open
6	Closed	Open	Open	Open	Closed	Open
7	Open	Open	Open	Open	Open	Closed
Note: Jumpers J9/5 through J9/8 are also used to select DMA Channel.						

DMA SELECTION (CONTINUED)					
Channel	J9/5	J9/6	J9/7	J9/8	
0	Closed	Open	Open	Open	
í 5	Open	Closed	Open	Open	
6	Open	Open	Closed	Open	
7	Open	Open	Open	Closed	
Note: Jumpers J5/7, J5/8, and J9/1 through J9/4 are also used to select DMA Channel.					

DN	A TRANSFER SPEED SELECTIO	Ν
Speed	J5/12	J5/13
í 5.0 MB/s	Open	Open
5.7 MB/s	Closed	Open
6.7 MB/s	Open	Closed
8.0 MB/s	Closed	Closed

MISCELLANEOUS TECHNICAL NOTES	
Jumper J6/1 should not be inserted when the system is in AT configuration with the BIOS of the	
magnetic peripherals on the mainboard.	l

Copyright © 1991, 1992, 1993 by Micro House Int'l (800) 926-8299. Research Dept. (303) 443-3389