


PURE DATA, LTD.
PDI507

NIC Type	ARCnet
Transfer Rate	2.5Mbps
Data Bus	8-bit ISA
Topology	Star
	Linear bus
Wiring Type	Unshielded twisted pair
	RG-62A/U 93ohm coaxial
Boot ROM	Available

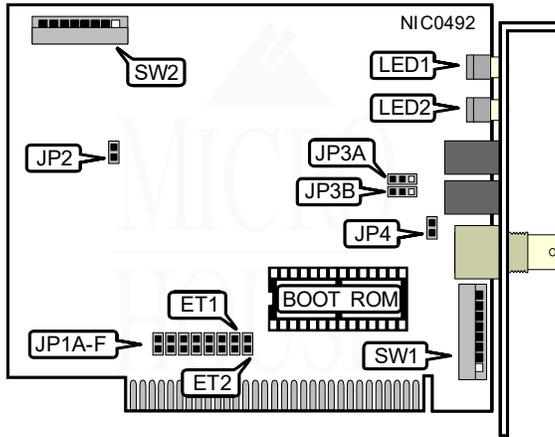

NODE ADDRESS								
Node	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
0	-	-	-	-	-	-	-	-
1	On	Off						
2	On	On	On	On	On	On	Off	On
3	On	On	On	On	On	On	Off	Off
4	On	On	On	On	On	Off	On	On
251	Off	Off	Off	Off	Off	On	Off	Off
252	Off	Off	Off	Off	Off	Off	On	On
253	Off	Off	Off	Off	Off	Off	On	Off
254	Off	On						
255	Off							

Note: Node address 0 is used for messaging between nodes and must not be used.
 A total of 255 node address settings are available. The switches are a binary representation of the decimal node addresses. Switch 8 is the Least Significant Bit and switch 1 is the Most Significant Bit. The switches have the following decimal values: switch 1=128, 2=64, 3=32, 4=16, 5=8, 6=4, 7=2, 8=1. Turn off the switches and add the values of the off switches to obtain the correct node address. (On=0, Off=1)

Continued on next page . . .

PURE DATA, LTD.
PD1507

... continued from previous page

I/O BASE ADDRESS			
Address	SW2/1	SW2/2	SW2/3
260-26Fh	On	On	On
290-29Fh	On	On	Off
2E0-2EFh	On	Off	On
2F0-2FFh	On	Off	Off
300-30Fh	Off	On	On
350-35Fh	Off	On	Off
380-38Fh	Off	Off	On
3E0-3EFh	Off	Off	Off

BASE MEMORY ADDRESS & BOOT ROM ADDRESS						
Base Address	Boot ROM Address	SW2/4	SW2/5	SW2/6	SW2/7	SW2/8
C0000 - C07FFh	C2000 - C3FFFh	On	On	On	On	On
C0800 - C0FFFh	C2000 - C3FFFh	On	On	On	On	Off
C1000 - C17FFh	C2000 - C3FFFh	On	On	On	Off	On
C1800 - C1FFFh	C2000 - C3FFFh	On	On	On	Off	Off
C4000 - C47FFh	C6000 - C7FFFh	On	On	Off	On	On
C4800 - C4FFFh	C6000 - C7FFFh	On	On	Off	On	Off
C5000 - C57FFh	C6000 - C7FFFh	On	On	Off	Off	On
C5800 - C5FFFh	C6000 - C7FFFh	On	On	Off	Off	Off
CC000 - CC7FFh	CE000 - CFFFFh	On	Off	On	On	On
CC800 - CCFFFh	CE000 - CFFFFh	On	Off	On	On	Off
CD000 - CD7FFh	CE000 - CFFFFh	On	Off	On	Off	On
CD800 - CDFFFh	CE000 - CFFFFh	On	Off	On	Off	Off
D0000 - D07FFh	D2000 - D3FFFh	On	Off	Off	On	On
D0800 - D0FFFh	D2000 - D3FFFh	On	Off	Off	On	Off
D1000 - D17FFh	D2000 - D3FFFh	On	Off	Off	Off	On
D1800 - D1FFFh	D2000 - D3FFFh	On	Off	Off	Off	Off
D4000 - D47FFh	D6000 - D7FFFh	Off	On	On	On	On
D4800 - D4FFFh	D6000 - D7FFFh	Off	On	On	On	Off
D5000 - D57FFh	D6000 - D7FFFh	Off	On	On	Off	On
D5800 - D5FFFh	D6000 - D7FFFh	Off	On	On	Off	Off
D8000 - D87FFh	DA000 - DBFFFh	Off	On	Off	On	On
D8800 - D8FFFh	DA000 - DBFFFh	Off	On	Off	On	Off
D9000 - D97FFh	DA000 - DBFFFh	Off	On	Off	Off	On
D9800 - D9FFFh	DA000 - DBFFFh	Off	On	Off	Off	Off
DC000 - DC7FFh	DE000 - DFFFFh	Off	Off	On	On	On
DC800 - DCFFFh	DE000 - DFFFFh	Off	Off	On	On	Off
DD000 - DD7FFh	DE000 - DFFFFh	Off	Off	On	Off	On
DD800 - DDFFFh	DE000 - DFFFFh	Off	Off	On	Off	Off
E0000 - E07FFh	E2000 - E2FFFh	Off	Off	Off	On	On
E0800 - E0FFFh	E2000 - E2FFFh	Off	Off	Off	On	Off
E1000 - E17FFh	E2000 - E2FFFh	Off	Off	Off	Off	On
E1800 - E1FFFh	E2000 - E2FFFh	Off	Off	Off	Off	Off

Continued on next page ...

INTERRUPT REQUEST						
IRQ	JP1A	JP1B	JP1C	JP1D	JP1E	JP1F
i2	Closed	Open	Open	Open	Open	Open
3	Open	Closed	Open	Open	Open	Open
4	Open	Open	Closed	Open	Open	Open
5	Open	Open	Open	Closed	Open	Open
6	Open	Open	Open	Open	Closed	Open
7	Open	Open	Open	Open	Open	Closed

RESPONSE AND RECONFIGURATION TIMEOUTS			
Response Time	Reconfiguration Time	ET1	ET2
i74.7µs	840ms	Open	Open
283.4µs	1680ms	Closed	Open
561.8µs	1680ms	Open	Closed
1118.6µs	1680ms	Closed	Closed

Note: All NICs on the network segment must have this option set the same.

BOOT ROM	
Setting	JP2
iDisabled	Open
Enabled	Closed

CABLE TYPE		
Type	JP3A	JP3B
iRG62A/U 93ohm coaxial	Pins 2 & 3 closed	Pins 2 & 3 closed
Unshielded twisted pair	Pins 1 & 2 closed	Pins 1 & 2 closed

ONBOARD TERMINATOR	
Setting	JP4
Disabled	Open
Enabled	Closed

Notes: If the card is on either end of a linear bus network segment, the onboard terminator may be used instead of using an external terminator.
If using a star topology the onboard terminator must be enabled.

DIAGNOSTIC LED(S)			
LED	Color	Status	Condition
LED1	Red	On	Data is being transmitted or received
LED1	Red	Off	Data is not being transmitted or received
LED2	Green	On	Network connection is good
LED2	Green	Steady Blinking	Network connection is broken

Note: If the node address is set above 224 then LED2's blinking will not be noticeable.