


# **ANSEL COMMUNICATIONS, INC.** **MODEL 2100**

<b>NIC Type</b>	Ethernet
<b>Transfer Rate</b>	10Mbps
<b>Data Bus</b>	16-bit ISA
<b>Topology</b>	Linear bus
<b>Wiring Type</b>	RG58A/U 50ohm coaxial cable AUI transceiver via DB-15
<b>Boot ROM</b>	Available

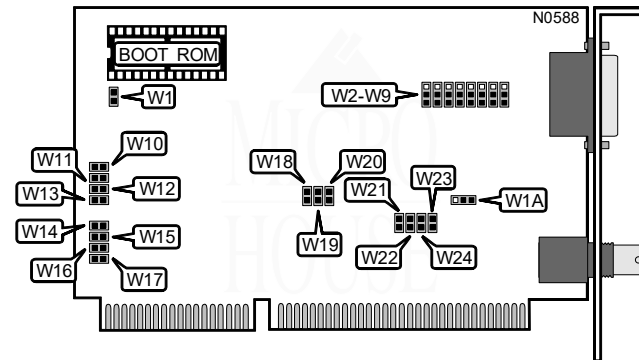

WAIT STATE CONFIGURATION	
Wait State(s)	W1
0 wait states	Open
1 wait state	Closed

CABLE TYPE	
Type	W2-W9
AUI transceiver via DB-15	Pins 1 & 2 closed
RG58A/U 50ohm coaxial	Pins 2 & 3 closed

SIGNAL QUALITY ERROR CONFIGURATION	
Mode	W1A
Signal quality error enabled	Pins 2 & 3 closed
Signal quality error disabled	Pins 1 & 2 closed

DMA CHANNEL								
Channel	W10	W11	W12	W13	W14	W15	W16	W17
DMA3	Closed	Open	Open	Open	Closed	Open	Open	Open
DMA5	Open	Closed	Open	Open	Open	Closed	Open	Open
DMA6	Open	Open	Closed	Open	Open	Open	Closed	Open
DMA7	Open	Open	Open	Closed	Open	Open	Open	Closed

Continued on next page . . .

**ANSEL COMMUNICATIONS, INC.**  
**MODEL 2100**

... continued from previous page

BOOT ROM	
Setting	W18
Disabled	Open
Enabled	Closed

BASE I/O ADDRESS		
Address	W19	W20
300h	Closed	Closed
320h	Closed	Open
340h	Open	Closed
360h	Open	Open

INTERRUPT SETTINGS				
IRQ	W21	W22	W23	W24
5	Open	Open	Closed	Open
10	Open	Closed	Open	Open
11	Open	Open	Open	Closed
15	Closed	Open	Open	Open