


THE NETWORK INTERFACE CARD TECHNICAL GUIDE

ANSEL COMMUNICATIONS, INC.
NH2000-B

NIC Type	Ethernet
Transfer Rate	10Mbps
Data Bus	16-bit ISA
Topology	Linear Bus
Wiring Type	RG58A/U 50ohm coaxial
Boot ROM	Available

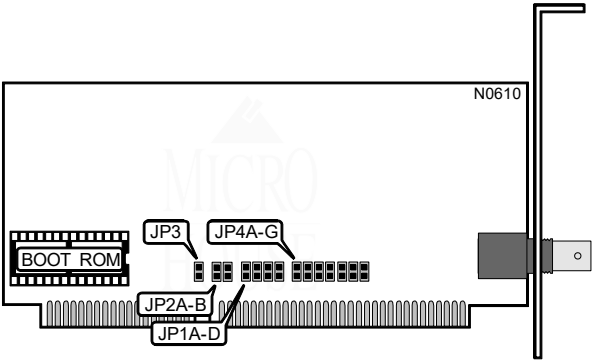

BOOT ROM ADDRESS				
Address	JP1A	JP1B	JP1C	JP1D
Disabled	Open	Open	Open	Open
C0000h	Closed	Closed	Closed	Closed
C4000h	Closed	Open	Closed	Closed
C8000h	Closed	Closed	Open	Closed
CC000h	Closed	Open	Open	Closed
D0000h	Closed	Closed	Closed	Open
D4000h	Closed	Open	Closed	Open
D8000h	Closed	Closed	Open	Open
DC000h	Closed	Open	Open	Open

BASE I/O ADDRESS		
Address	JP2A	JP2B
300h	Closed	Closed
320h	Open	Closed
340h	Closed	Open
360h	Open	Open

Continued on next page . . .

ANSEL COMMUNICATIONS, INC.
N H 2 0 0 0 - B

... continued from previous page

COMPATIBILITY MODE	
Function	JP3
Disabled	Closed
Enabled	Open
Note: Enable compatibility mode if card is installed in an IBM PS/2 Model 30, or any 80286 using the NEAT series chipset.	

INTERRUPT SETTINGS							
IRQ	JP4A	JP4B	JP4C	JP4D	JP4E	JP4F	JP4G
2/9	Closed	Open	Open	Open	Open	Open	Open
3	Open	Closed	Open	Open	Open	Open	Open
4	Open	Open	Closed	Open	Open	Open	Open
5	Open	Open	Open	Closed	Open	Open	Open
10	Open	Open	Open	Open	Closed	Open	Open
11	Open	Open	Open	Open	Open	Closed	Open
12	Open	Open	Open	Open	Open	Open	Closed