
## STANDARD MICROSYSTEMS CORPORATION

## ETHERCARD ELITE16T ULTRA ADAPTER

NIC Type Ethernet
Transfer Rate 10Mbps
Data Bus 16-bit ISA
Topology Linear Bus, Star
Wiring Type Unshielded twisted pair
Boot ROM Available

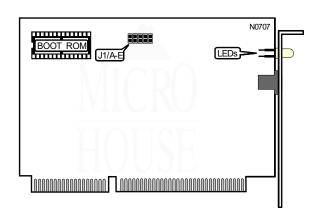

ADDRESS/INTERRUPT CONFIGURATION									
I/O Address	RAM Address	ROM Address	IRQ	W1/A	W1/B	W1/C	W1/D	W1/E	
Software	Software	Software	Software	Closed	Open	Open	Open	Open	
280h	D000h	None	IRQ3	Open	Closed	Open	Open	Open	
300h	CC00h	None	IRQ10	Open	Open	Closed	Open	Open	
280h	D000h	D800h	IRQ3	Open	Open	Open	Closed	Open	
300h	CC00h	D800h	IRQ10	Open	Open	Open	Open	Closed	
Note: The factory default is software configured address and interrupt selection.									

Continued on next page . . .

## STANDARD MICROSYSTEMS CORPORATION

## ETHERCARD ELITE16T ULTRA ADAPTER

. . . continued from previous page



DIAGNOSTIC LEDs						
LED	Color	Status	Condition			
LED1	Green	Off	Network connection is broken			
LED1	Green	On	Network connection is good			
LED2	Yellow	Off	Data is not being transmitted/received			
LED2	Yellow	On	Data is being transmitted/received			