


## Chapter 5: Jumper Settings

### LINKSYS

### 10/100TX ETHERFAST LAN CARD

<b>NIC Type</b>	Ethernet
<b>Transfer Rate</b>	10/100Mbps
<b>Data Bus</b>	PCI
<b>Topology</b>	Star
<b>Wiring Type</b>	Shielded twisted pair Unshielded twisted pair
<b>Boot ROM</b>	Not available

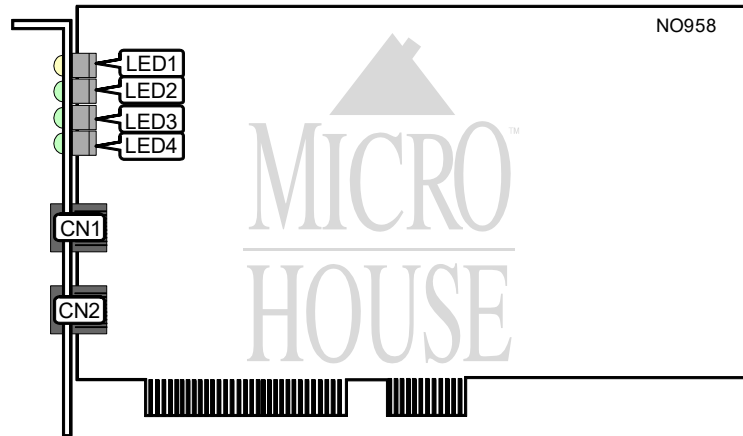

CONNECTIONS	
Purpose	Location
RJ-45 / 100Mbps	CN2
RJ-45 / 10Mbps	CN1

DIAGNOSTIC LED(S)			
LED	Color	Status	Condition
LED1	Yellow	On	100 Mbps connection speed
LED1	Yellow	Off	10 Mbps connection speed
LED2	Green	Blinking	Data is being transmitted
LED2	Green	On	Power is on
LED2	Green	Off	Power is off
LED3	Green	On	Data is being received
LED3	Green	Off	Data is not being received
LED4	Green	On	Data collisions are occurring
LED4	Green	Off	Data collisions are not occurring