


**Chapter 5: Jumper Settings**  
**STANDARD MICROSYSTEMS CORPORATION**  
**INTERNAL COAX HUB**

<b>NIC Type</b>	Arcnet
<b>Transfer Rate</b>	2.5Mbps
<b>Data Bus</b>	8-bit ISA
<b>Topology</b>	Star
<b>Wiring Type</b>	RG-62A/U 93ohm coaxial
<b>Boot ROM</b>	Not available

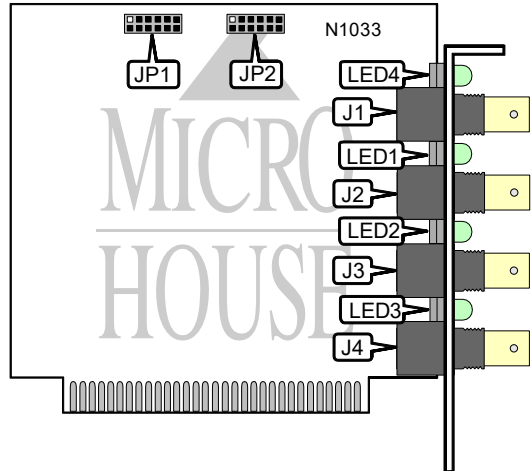

CONNECTIONS			
Purpose	Location	Purpose	Location
RG-62A/U ports 1-4	J1 - J4	Internal hub connectors	JP1 & JP2

DIAGNOSTIC LED(S)			
LED	Color	Status	Condition
LED1	Green	On	Data is being transmitted/received on J2
LED1	Green	Off	Data is not being transmitted/received on J2
LED1	Green	Blinking	Reconfiguration on J2
LED2	Green	On	Data is being transmitted/received on J3
LED2	Green	Off	Data is not being transmitted/received on J3
LED2	Green	Blinking	Reconfiguration on J3
LED3	Green	On	Data is being transmitted/received on J4
LED3	Green	Off	Data is not being transmitted/received on J4
LED3	Green	Blinking	Reconfiguration on J4
LED4	Green	On	Data is being transmitted/received on J5
LED4	Green	Off	Data is not being transmitted/received on J5
LED4	Green	Blinking	Reconfiguration on J5