


**Chapter 5: Jumper Settings**  
**3COM CORPORATION**  
**ETHERLINK II ADAPTER 2227-XX**

<b>NIC Type</b>	Ethernet
<b>Transfer Rate</b>	10Mbps
<b>Data Bus</b>	8-bit ISA
<b>Topology</b>	Linear Bus
<b>Wiring Type</b>	AUI Transceiver via DB-15 port RG-58A/U 50ohm coaxial
<b>Boot ROM</b>	Available

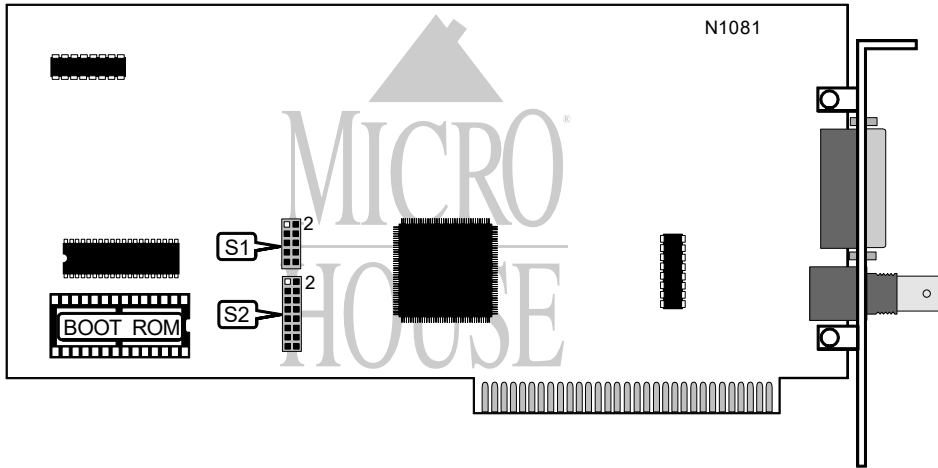

BASE I/O ADDRESS SELECTION				
Address	S2 pins 1 & 2	S2 pins 3 & 4	S2 pins 5 & 6	S2 pins 7 & 8
2E0h	Open	Open	Open	Open
2A0h	Open	Open	Open	Open
280h	Open	Open	Open	Open
250h	Open	Open	Open	Open
350h	Open	Open	Open	Closed
330h	Open	Open	Closed	Open
310h	Open	Closed	Open	Open
300h	Closed	Open	Open	Open

*Continued next page...*

**THE NETWORK INTERFACE CARD TECHNICAL GUIDE**  
**3COM CORPORATION**  
**ETHERLINK II ADAPTER 2227-XX**

... continued from previous page.

BASE I/O ADDRESS SELECTION				
Address	S2 pins 9 & 10	S2 pins 11 & 12	S2 pins 13 & 14	S2 pins 15 & 16
2E0h	Open	Open	Open	Closed
2A0h	Open	Open	Closed	Open
280h	Open	Closed	Open	Open
250h	Closed	Open	Open	Open
350h	Open	Open	Open	Open
330h	Open	Open	Open	Open
310h	Open	Open	Open	Open
if 300h	Open	Open	Open	Open

BIOSADDRESS					
Address	S1 pins 1 & 2	S1 pins 3 & 4	S1 pins 5 & 6	S1 pins 7 & 8	S1 pins 9 & 10
DC000h	Open	Open	Open	Open	Closed
D8000h	Open	Open	Open	Closed	Open
CC000h	Open	Open	Closed	Open	Open
C8000h	Open	Closed	Open	Open	Open
if Disabled	Closed	Open	Open	Open	Open