


# Chapter 5: Jumper Settings

## TRENDWARE INTERNATIONAL INC.

### T E - 1 6 C T

**NIC Type** Ethernet  
**Transfer Rate** 10Mbps  
**Data Bus** 16-bit ISA  
**Topology** Linear Bus/Star  
**Wiring Type** Unshielded twisted pair  
 RG-58A/U 50ohm coaxial  
**Boot ROM** Available

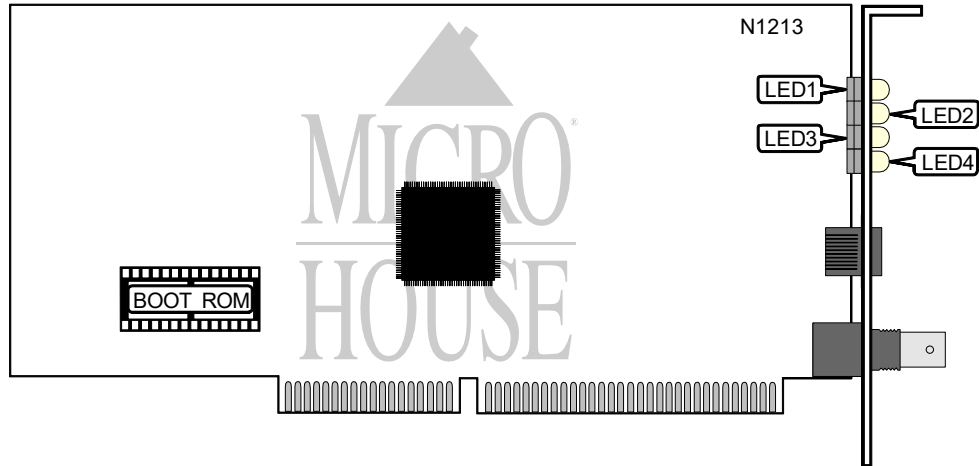

DIAGNOSTIC LED(S)		
LED	Status	Condition
LED1	On	Power on
LED1	Blinking	Data is being transmitted on 10Base-T
LED1	Off	Power off
LED2	On	Network connection is good for 10Base-T or 10Base-2
LED2	Blinking	Data is being received on 10Base-T
LED2	Off	Network connection broken for 10Base-T or 10Base-2
LED3	On	Network collision has been detected
LED3	Off	Network collision has not been detected
LED4	On	Bad cable connection has been detected on 10Base-2
LED4	Blinking	Jabber has been detected on network for 10Base-T or 10Base-2
LED4	Off	Jabber has not been detected on network for 10Base-T or 10Base-2
LED4	Off	10Base-2 cable connection is good