


**Chapter 5: Jumper Settings**  
**COMPEX, INC.**  
**FREEDOMLINE ENET16-TP/FL**

<b>NIC Type</b>	Ethernet
<b>Transfer Rate</b>	10Mbps
<b>Data Bus</b>	16-bit ISA
<b>Topology</b>	Star
<b>Wiring Type</b>	Unshielded twisted pair
<b>Boot ROM</b>	Available

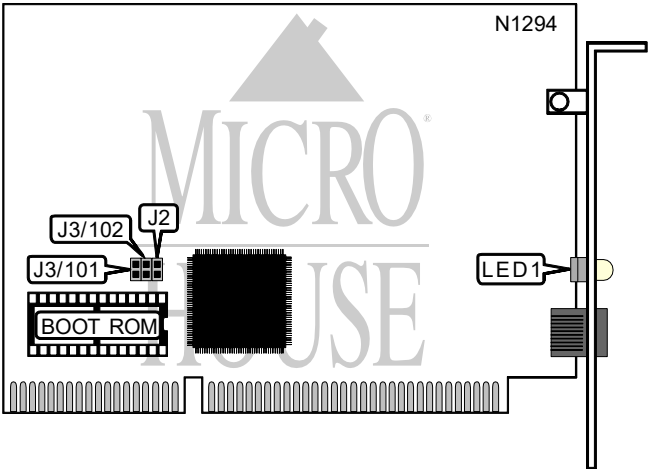

BASE I/O ADDRESS SELECTION		
Address	J3/101	J3/102
300h	Open	Open
240h	Closed	Open
2C0h	Open	Closed
340h	Closed	Closed

BOOT ROM CONFIGURATION	
Setting	J2
Enabled	Open
Disabled	Closed

DIAGNOSTIC LED(S)		
LED	Status	Condition
LED1	On	10Base-T network connection is good
LED1	Off	10Base-T network connection is broken