


# **Chapter 5: Jumper Settings** **MULTITECH SYSTEMS, INC.** **PC 5250 / PC G 5250**

**NIC Type** IBM5250  
**Transfer Rate** Unidentified  
**Data Bus** 8-bit ISA  
**Topology** Linear Bus/Star  
**Wiring Type** Shielded twisted pair  
 AUI Transceiver via DB-15 port  
**Boot ROM** Not available

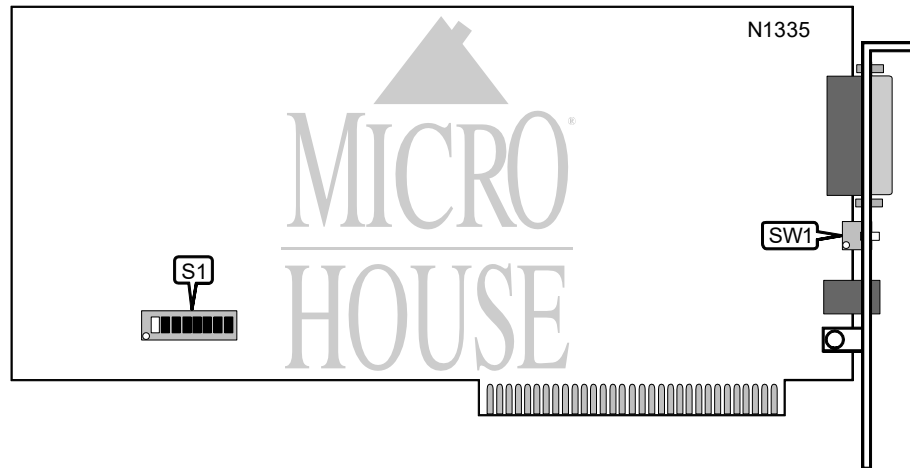

NETWORK CHAIN CONFIGURATION	
Setting	SW1
Thru	Position 1
Term	Position 2

BASE I/O ADDRESS SELECTION								
Address	S1/1	S1/2	S1/3	S1/4	S1/5	S1/6	S1/7	S1/8
300h	Closed	Closed	Closed	Closed	Closed	Closed	Closed	Open
302h	Open	Closed	Closed	Closed	Closed	Closed	Closed	Open
304h	Closed	Open	Closed	Closed	Closed	Closed	Closed	Open
306h	Open	Open	Closed	Closed	Closed	Closed	Closed	Open
308h	Closed	Closed	Open	Closed	Closed	Closed	Closed	Open
30Ah	Open	Closed	Open	Closed	Closed	Closed	Closed	Open
30Ch	Closed	Open	Open	Closed	Closed	Closed	Closed	Open
30Eh	Open	Open	Open	Closed	Closed	Closed	Closed	Open
30Fh	Closed	Closed	Open	Closed	Open	Open	Closed	Open
3F0h	Closed	Closed	Closed	Open	Open	Open	Open	Open
3F2h	Open	Closed	Closed	Open	Open	Open	Open	Open
3F4h	Closed	Open	Closed	Open	Open	Open	Open	Open
3F6h	Open	Open	Closed	Open	Open	Open	Open	Open

Continued next page...

**THE NETWORK INTERFACE CARD TECHNICAL GUIDE**  
**MULTITECH SYSTEMS, INC.**  
**P C 5 2 5 0 / P C G 5 2 5 0**

... continued from previous page.

BASE I/O ADDRESS SELECTION (CON'T)								
Address	S1/1	S1/2	S1/3	S1/4	S1/5	S1/6	S1/7	S1/8
3F8h	Closed	Closed	Open	Open	Open	Open	Open	Open
3FAh	Open	Closed	Open	Open	Open	Open	Open	Open
3FCh	Closed	Open	Open	Open	Open	Open	Open	Open
3FEh	Open	Open	Open	Open	Open	Open	Open	Open