


Chapter 5: Jumper Settings

OLIVETTI

NCU 9141-II

NIC Type	Ethernet
Transfer Rate	10Mbps
Data Bus	16-bit ISA
Topology	Linear Bus
Wiring Type	AUI Transceiver via DB-15 port RG-58A/U 50ohm coaxial
Boot ROM	Not available

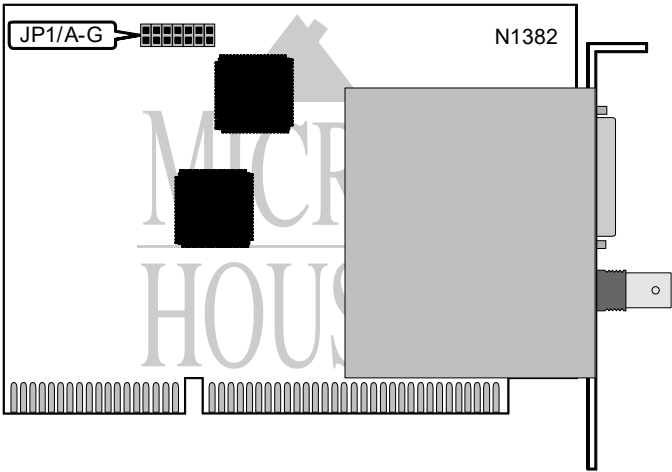

MEMORY CONFIGURATION	
Size	JP1/G
16KB	Open
1 64KB	Closed

USER CONFIGURABLE SETTINGS		
Purpose	Location	Setting
1 Factory configurable - do not alter	JP1/A	N/A
1 MEGA O	JP1/F	Open
MEGA F	JP1/F	Closed
1 Native parameter settings	JP1/E	Closed
Emulation parameter settings (NCU9141 - NCU9143)	JP1/E	Open

Continued next page...

THE NETWORK INTERFACE CARD TECHNICAL GUIDE
OLIVETTI
NCU 9141-II

... continued from previous page.

BIOS ADDRESS SELECTION				
Address	Window	JP1/A	JP1/B	JP1/C
C000h	16K	Closed	Closed	Closed
C400h	16K	Closed	Closed	Open
C800h	16K	Closed	Open	Closed
CC00h	16K	Closed	Open	Open
D000h	16K	Open	Closed	Closed
D400h	16K	Open	Closed	Open
D800h	16K	Open	Open	Closed
DC00h	16K	Open	Open	Open
C000h	32K	Closed	Closed	Open
C800h	32K	Closed	Open	Open
D000h	32K	Open	Closed	Open
D800h	32K	Open	Open	Open
C000h	64K	Closed	Open	Open
D000h	64K	Open	Open	Open