


**Chapter 5: Jumper Settings**  
**OLIVETTI**  
**NCU 9142 ASSY 2227-XX**

**NIC Type** Ethernet  
**Transfer Rate** 10Mbps  
**Data Bus** 8-bit ISA  
**Topology** Linear Bus  
**Wiring Type** DIX Transceiver via DB-15 port  
 RG-58A/U 50ohm coaxial  
**Boot ROM** Available

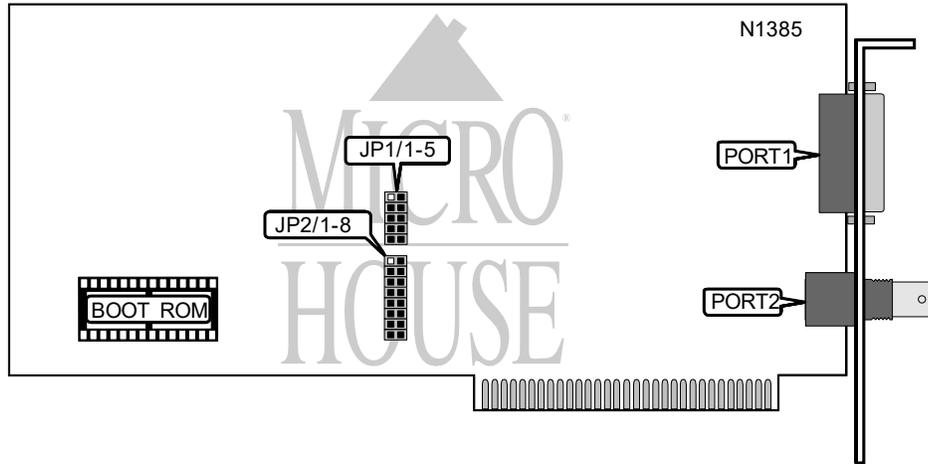

CONNECTIONS			
Purpose	Location	Purpose	Location
DIX Transceiver via DB-15 port	PORT1	G-58A/U 50ohm coaxial port	PORT2

BIOS ADDRESS SELECTION					
Address	JP1/1	JP1/2	JP1/3	JP1/4	JP1/5
Disabled	Closed	Open	Open	Open	Open
DC000h	Open	Closed	Open	Open	Open
D8000h	Open	Open	Closed	Open	Open
CC000h	Open	Open	Open	Closed	Open
C8000h	Open	Open	Open	Open	Closed

Continued next page...

THE NETWORK INTERFACE CARD TECHNICAL GUIDE  
 OLIVETTI  
 NCU 9142 ASSY 2227-XX

... continued from previous page.

BASE I/O ADDRESS SELECTION								
Address	JP2/1	JP2/2	JP2/3	JP2/4	JP2/5	JP2/6	JP2/7	JP2/8
i 300h	Closed	Open						
310h	Open	Closed	Open	Open	Open	Open	Open	Open
330h	Open	Open	Closed	Open	Open	Open	Open	Open
350h	Open	Open	Open	Closed	Open	Open	Open	Open
250h	Open	Open	Open	Open	Closed	Open	Open	Open
280h	Open	Open	Open	Open	Open	Closed	Open	Open
2A0h	Open	Open	Open	Open	Open	Open	Closed	Open
2E0h	Open	Closed						