


# Chapter 5: Jumper Settings

## OLIVETTI

### NCU 9162 (G0511)

**NIC Type** Token Ring  
**Transfer Rate** 4/16Mbps  
**Data Bus** 16-bit ISA  
**Topology** Ring  
**Wiring Type** Shielded twisted pair  
 Unshielded twisted pair  
**Boot ROM** Available

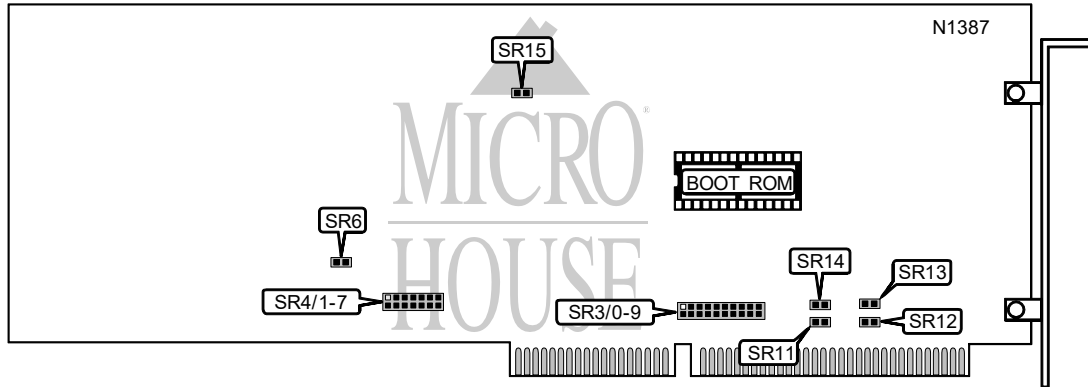

USER CONFIGURABLE SETTINGS		
Purpose	Location	Setting
Factory configured - do not alter	SR4/1	N/A
Factory configured - do not alter	SR4/2	N/A
Factory configured - do not alter	SR4/3	N/A
Factory configured - do not alter	SR4/4	N/A
Factory configured - do not alter	SR3/8	N/A

INTERRUPT SELECTION									
IRQ	SR3/0	SR3/1	SR3/2	SR3/3	SR3/4	SR3/5	SR3/6	SR3/7	SR3/9
2/9	Open	Open	Open	Open	Open	Open	Open	Open	Closed
3	Open	Open	Open	Closed	Open	Open	Open	Open	Open
4	Open	Open	Open	Open	Closed	Open	Open	Open	Open
5	Open	Open	Open	Open	Open	Closed	Open	Open	Open
6	Open	Open	Open	Open	Open	Open	Closed	Open	Open
7	Open	Open	Open	Open	Open	Open	Open	Closed	Open
10	Closed	Open	Open	Open	Open	Open	Open	Open	Open
11	Open	Closed	Open	Open	Open	Open	Open	Open	Open
12	Open	Open	Closed	Open	Open	Open	Open	Open	Open

Continued next page...

**THE NETWORK INTERFACE CARD TECHNICAL GUIDE**  
**OLIVETTI**  
**NCU 9162 (G0511)**

... continued from previous page.

DMA CHANNEL SELECTION			
Channel	SR4/5	SR4/6	SR4/7
5	Closed	Open	Open
6	Open	Closed	Open
7	Open	Open	Closed

CLOCK CONFIGURATION		SR6
Setting		
Internal		Closed
Computer		Open

BOOT ROM SIZE SELECTION		
Size	SR11	SR12
8/16KB	Closed	Closed
32KB	Open	Closed
64KB	Open	Open

BOOT ROM CONFIGURATION		SR13
Setting		
Deactivated		Closed
Activated		Open

ADAPTER CONFIGURATION		SR14
Setting		
Primary		Closed
Alternative (secondary)		Open

BRIDGE PAL CONFIGURATION		SR15
Setting		
Not Inserted		Closed
Inserted		Open