
## EDIMAX COMPUTER CORPORATION 2000RA 10BASE-2

NIC Type Ethernet
Network Transfer Rate 10Mbps
Data Bus 16-bit ISA
Topology Linear Bus

Wiring Type RG-58A/U 50ohm coaxial Boot ROM Available (location unidentified)

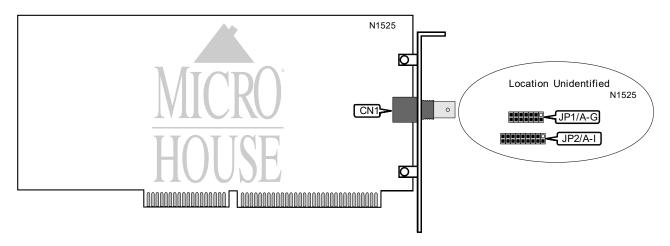

CONNECTIONS			
Function	Label		
RG-58A/U 50ohm coaxial port	CN1		

USER CONFIGURABLE SETTINGS		
Function	Label	Position
í Boot ROM Disabled	JP1/A	Open
Boot ROM Enabled	JP1/A	Closed
í Software configuration - Jumperless mode	JP2/A	Closed
Hardware configuration - Jumpered mode	JP2/A	Open

	BASE I/O ADDRI	ESS SELECTION	
Address	JP1/E	JP1/F	JP1/G
200h	Closed	Open	Open
220h	Closed	Open	Closed
240h	Closed	Closed	Open
260h	Closed	Closed	Closed
300h	Open	Open	Open
320h	Open	Open	Closed
340h	Open	Closed	Open
360h	Open	Closed	Closed

Continued on next page. . .

## EDIMAX COMPUTER CORPORATION 2000RA 10BASE-2

. . . continued from previous page

			INTER	RUPT SELE	CTION			
IRQ	JP2/B	JP2/C	JP2/D	JP2/E	JP2/F	JP2/G	JP2/H	JP2/I
2	Closed	Open	Open	Open	Open	Open	Open	Open
í 3	Open	Closed	Open	Open	Open	Open	Open	Open
4	Open	Open	Closed	Open	Open	Open	Open	Open
5	Open	Open	Open	Closed	Open	Open	Open	Open
10	Open	Open	Open	Open	Closed	Open	Open	Open
11	Open	Open	Open	Open	Open	Closed	Open	Open
12	Open	Open	Open	Open	Open	Open	Closed	Open
15	Open	Open	Open	Open	Open	Open	Open	Closed
Note: Whe	Note: When setting IRQ leave JP2/A open.							

	ROM SIZE S	SELECTION		
Size	JP1/B	JP1/C	JP1/D	
C0000h	Open	Open	Open	
C4000h	Open	Open	Closed	
í C8000h	Open	Closed	Open	
CC000h	Open	Closed	Closed	
D0000h	Closed	Open	Open	
D4000h	Closed	Open	Closed	
D8000h	Closed	Closed	Open	
DC000h	Closed	Closed	Closed	
Note: When setting Boot ROM Address make sure jumper JP1/A is closed.				

TECHNICAL NOTE
Note: The location of the 2 LEDs for network activity is unidentified.