


# IBM CORPORATION

## AUTO BUSMASTER PCI, AUTO LANSTREAMER PCI

Card Type	Network Interface Card
NIC Type	Token Ring
Maximum Onboard Memory	Unidentified
Boot ROM	Unidentified
Network Transfer Rate	10Mbps
Topology	Ring
Wiring Type	Unshielded twisted pair
Data Bus	32-bit PCI

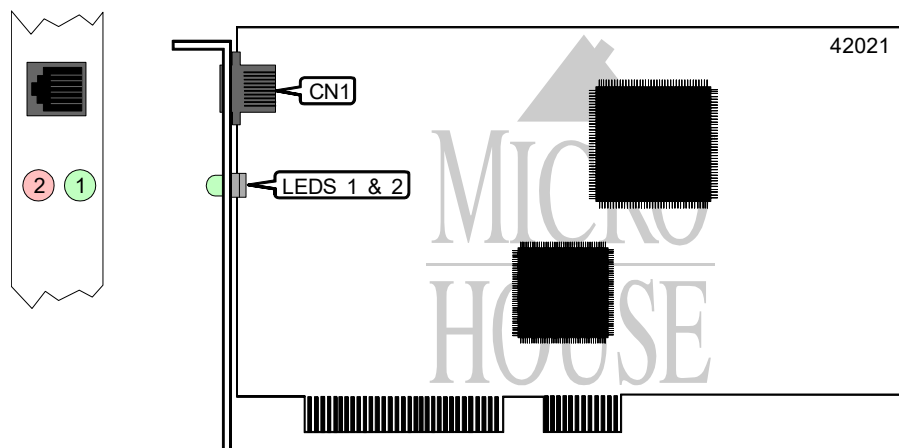

CONNECTIONS	
Function	Label
UTP connector	CN1

DIAGNOSTIC LED(S)		
LED1 (Green)	LED2 (Red)	Condition
Blinking	Blinking	Waiting for initialization
Off	Off	Initialization in progress or computer turned off
Off	Blinking	Self-diagnostic tests complete (no errors)
Off	On	Network connection is good
On	Off	Self-diagnostic tests complete (errors detected)
Blinking	Off	Network connection is broken and: a) open failed, and wire fault was detected, or b) auto-removal test failed
Blinking	On	Beaconing or hard error detected
On	On	Adapter failure