


ACS COMPUTER GROUP LASERWAVE NUCLEUS 16

Card Type	Sound card
Chipset Controller	ESS Technology, Inc. ES688
I/O Options	Game port, MIDI port, line in, mic in, line out, speaker, volume control, CD-ROM interface (4), SCSI interface, SCSI-2 interface
Maximum Dram	N/A

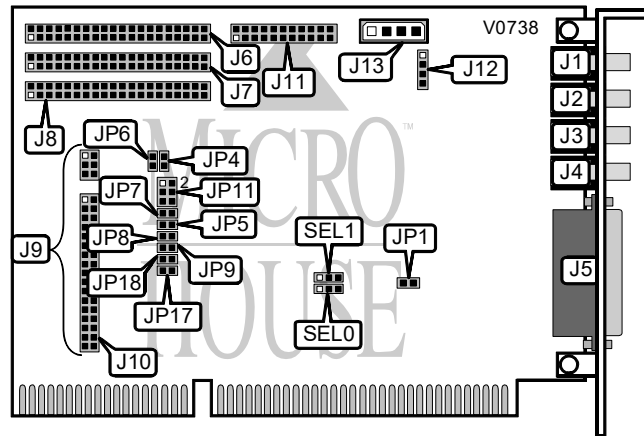

CONNECTIONS			
Purpose	Location	Purpose	Location
Speaker	J1	Header for SCSI-2 daughterboard	J8
Line out	J2	Headers for SCSI daughterboard	J9
Line in	J3	Sony CD-ROM interface	J10
Mic in	J4	Header for wave-table daughterboard	J11
Game/MIDI port	J5	Sony CD audio in	J12
Panasonic CD-ROM interface	J6	Panasonic Molex-D 4 CD audio in	J13
Mitsumi CD-ROM interface	J7		
Note: If your CD's audio cable ends in a Molex-D 3 plug, connect it to the first three pins of J13.			

GAME PORT CONFIGURATION	
Port	JP1
Enabled	Closed
Disabled	Open

CD-ROM CONFIGURATION	
Setting	JP6
Enabled	Closed
Disabled	Open

Continued on next page. . .

ACS COMPUTER GROUP
LASERWAVE NUCLEUS 16

...continued from previous page

SCSI CONFIGURATION	
Setting	JP5
Disabled	Open
Enabled	Closed

CD-ROM CONFIGURATION	
Setting	JP7
Disabled	Open
Enabled	Closed

SOUND CARD MEMORY BASE ADDRESS SELECTION		
Address	SEL0	SEL1
220h	Pins 1 & 2 closed	Pins 1 & 2 closed
230h	Pins 2 & 3 closed	Pins 1 & 2 closed
240h	Pins 1 & 2 closed	Pins 2 & 3 closed
250h	Pins 2 & 3 closed	Pins 2 & 3 closed

CD-ROM MEMORY BASE ADDRESS SELECTION		
Address	JP18	JP17
340h	Closed	Open
320h	Open	Closed

SCSI MEMORY BASE ADDRESS SELECTION		
Address	JP8	JP9
280h	Closed	Open
2B0h	Open	Closed

SCSI INTERRUPT SELECTION	
IRQ	JP11
5	Pins 1 & 2 closed
12	Pins 3 & 4 closed
15	Pins 5 & 6 closed

CD-ROM TYPE SELECTION	
Type	JP6
Panasonic	Closed
Sony/Mitsumi/SCSI	Open

SCSI-2 SELECTION	
Setting	JP4
SCSI-2 daughterboard not installed	Open
SCSI-2 daughterboard installed	Closed