


Chapter 5: Jumper Settings **TOPTEK MULTIMEDIA, INC.** **GOLDEN SOUND GS-32**

Card Type Sound card
Chipset Controller Unidentified
I/O Options Game port, line in, line out
Maximum DRAM N/A

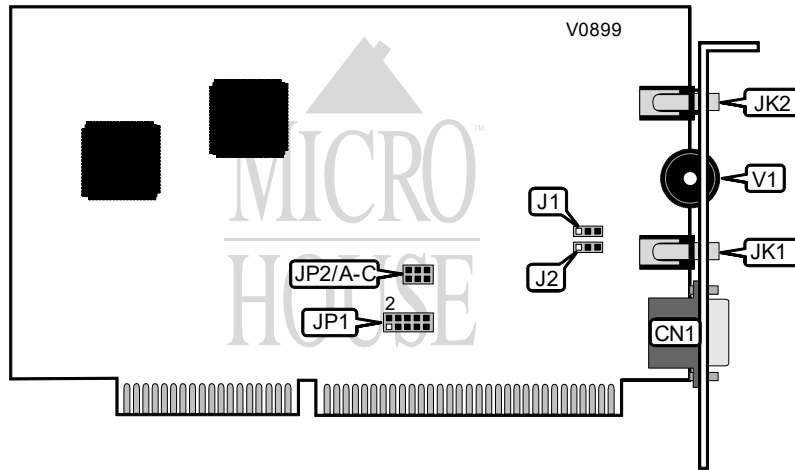

CONNECTIONS			
Purpose :	Location	Purpose :	Location
Line out/speaker out	JK1	Game Port	CN1
Line in	JK2	Volume	V1

INTERRUPT SELECTION	
IRQ	JP1
2	Pins 1 & 2 closed
3	Pins 3 & 4 closed
4	Pins 5 & 6 closed
5	Pins 7 & 8 closed
7	Pins 9 & 10 closed

LINE OUT SELECTION		
Type	J1	J2
Line Out	Pins 2 & 3 closed	Pins 2 & 3 closed
Phone Out	Pins 1 & 2 closed	Pins 1 & 2 closed

Continued next page...

THE NETWORK INTERFACE CARD TECHNICAL GUIDE
TOPTEK MULTIMEDIA, INC.
GOLDEN SOUND GS-32

... continued from previous page

GAMEPORT BASE ADDRESS SELECTION		
Address	JP2/A	JP2/B
í 330	Closed	Closed
300	Open	Open
310	Open	Closed
320	Closed	Open

GAMEPORT CONFIGURATION	
Setting	JP2/C
í Disabled	Open
Enabled	Closed