Chapter 5: Jumper Settings TOPTEK MULTIMEDIA, INC. GOLDEN SOUND PRO III


Card Type Chipset Controller Sound card/CD-ROM

TMC

I/O Options CD audio (3), CD-ROM interface (3), MIC in, midi/game port, line in, line out,

volume

Maximum DRAM N/A

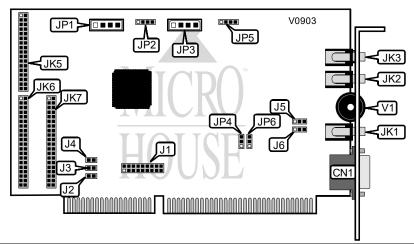

CONNECTIONS			
Purpos ;	Location	Purpos :	Location
Midi/game Port	CN1	Mitsumi CD-ROM interface	JK7
Line out/phone out	JK1	Mitsumi CD-ROM audio	JP1
Line in (Stereo)	JK2	Sony CD-ROM audio	JP2
MIC in (Stereo)	JK3	Panasonic CD-ROM audio	JP3
Sony CD-ROM interface	JK5	Volume	V1
Panasonic CD-ROM interface	JK6		

INTERRUPT	SELECTION
IRQ	J1
í 7	pins 9 & 10 closed
2/9	pins 17 & 18 closed
5	pins 7 & 8 closed
10	pins 11 & 12 closed
11	pins 13 & 14 closed
12	pins 15 & 16 closed

LINE OUT SELECTION		
Type	J5	J6
í Line Out	pins 2 & 3 closed	pins 2 & 3 closed
Phone Out	pins 1 & 2 closed	pins 1 & 2 closed

Continued next page...

THE NETWORK INTERFACE CARD TECHNICAL GUIDE TOPTEK MULTIMEDIA, INC. GOLDEN SOUND PRO III

. . . continued from previous page

BASE I/O ADDRESS SELECTION		
Sound card address	CD-ROM address	J2
í 220	320	Open
240	340	Closed

GAMEPORT CONFIGURATION		
Setting	J3	
í Enabled	Closed	
Disabled	Open	

DMA CHANNEL SELECTION	
Channel	J1
í 1	pins 1 & 3, 2 & 4 closed
3	pins 3 & 5, 4 & 6 closed

CD-ROM TYPE SELECTION	
Type J4	
í Panasonic	Open
Mitsumi	Closed
Sony	Closed

ECHO EFFECT CONFIGURATION		
Setting	JP4	JP6
í Enabled	pins 1 & 2 closed	pins 1 & 2 closed
Disabled	pins 2 & 3 closed	pins 2 & 3 closed

MICROPHONE TYPE SELECTION		
Туре	JP5	
í Capacity Mic	pins 1 & 2, 3 & 4 closed	
Magnetic coil Mic	all open	