


MEDIA VISION TECHNOLOGY, INC.  
GUIDE PREMIUM 3D MCD

<b>Card Type</b>	Sound card
<b>Chipset Controller</b>	Unidentified
<b>I/O Options</b>	CD audio in (3), CD-ROM interface (3), gain control, game/MIDI port, line in, line/speaker out, microphone in, wavetable interface
<b>Maximum DRAM</b>	N/A

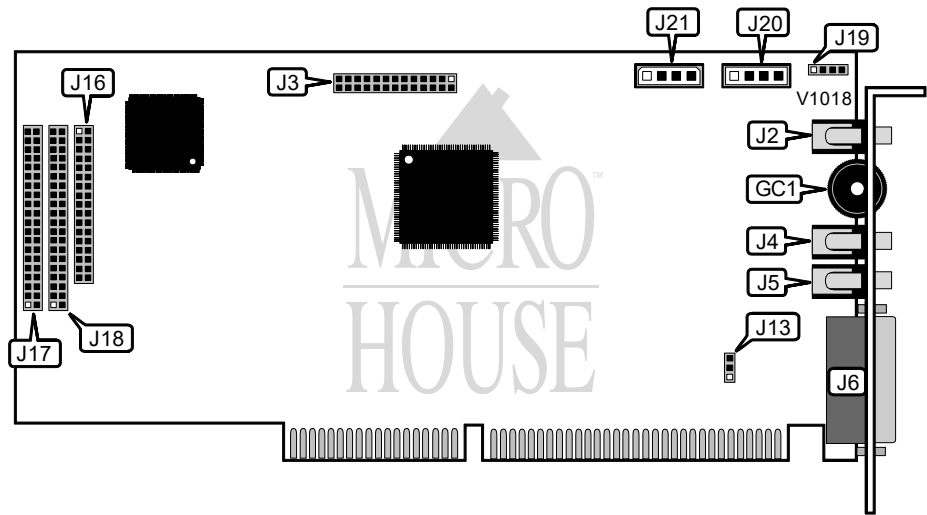

CONNECTIONS			
Purpose :	Location	Purpose :	Location
Gain control	GC1	Sony CD-ROM interface	J16
Line in	J2	Mitsumi CD-ROM interface	J17
Wavetable interface	J3	Panasonic CD-ROM interface	J18
Line/speaker out	J4	Sony CD audio in	J19
Mic in	J5	Panasonic CD audio in	J20
Game/MIDI port	J6	Mitsumi CD audio in	J21

DRQ SHARING CONFIGURATION	
Setting	J13
Enabled	Pins 2 & 3 closed
Disabled	Pins 1 & 2 closed