


**TELEVIDEO SYSTEMS, INC.**  
**TELEWAVE AUDIO 32**

<b>Card Type</b>	Sound card
<b>Chipset Controller</b>	N/A
<b>I/O Options</b>	CD-ROM audio in (3), CD-ROM interface (3), game/MIDI port, IDE (AT) interface, line in, line out, microphone in, speaker out
<b>Maximum DRAM</b>	N/A

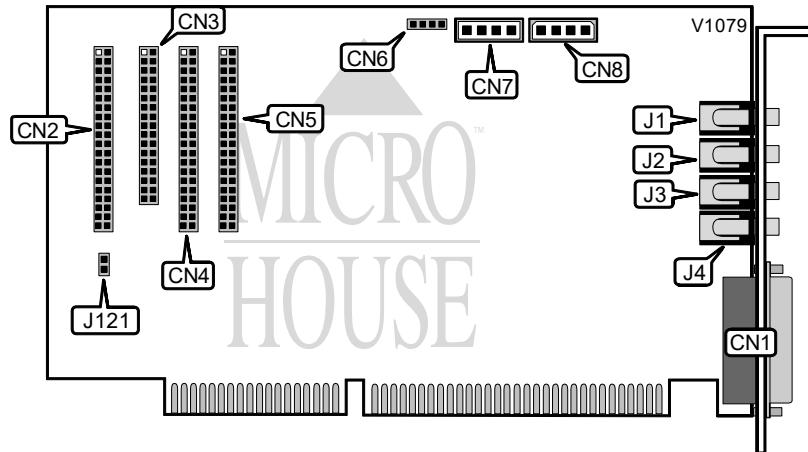

CONNECTIONS			
Purpose	Location	Purpose	Location
Game/MIDI port	CN1	Mitsumi CD - audio in	CN7
40-pin IDE (AT) interface	CN2	Panasonic CD - audio in	CN8
Sony CD-ROM interface	CN3	Speaker out	J1
Mitsumi CD-ROM interface	CN4	Line out	J2
Panasonic CD-ROM interface	CN5	Line in	J3
Sony CD - audio in	CN6	Mic in	J4

CD-ROM INTERFACE SELECTION	
Type	J121
IDE (AT) drive	Closed
Sony/Mitsumi/Panasonic drives	Open