


MULTIWAVE INNOVATION, INC.  
AUDIO WAVE 16 AISP

<b>Card Type</b>	Sound card
<b>Chipset Controller</b>	Unidentified
<b>I/O Options</b>	CD-ROM audio, CD-ROM interface, game/MIDI port, line in, line out, microphone in, Speaker out
<b>Maximum DRAM</b>	N/A

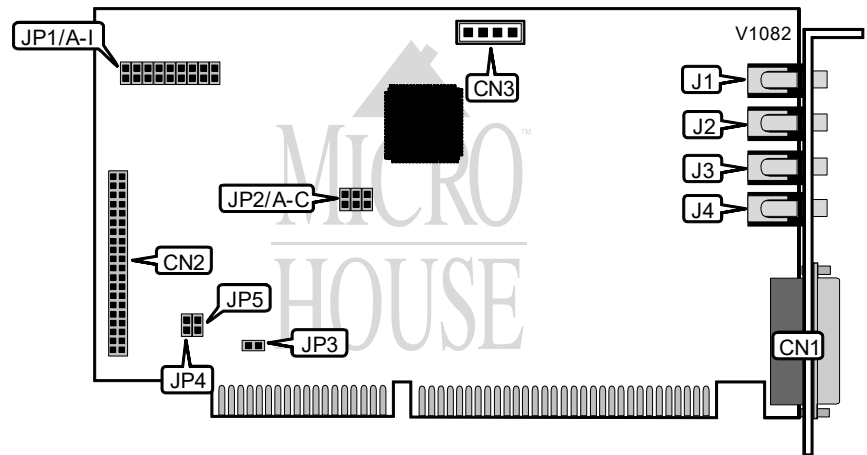

CONNECTIONS			
Purpose :	Location	Purpose :	Location
Game/MIDI port	CN1	Line out	J2
CD-ROM interface	CN2	Line in	J3
CD - audio in	CN3	Mic in	J4
Speaker out	J1		

I/O PORT ADDRESS SELECTION		
Address	JP4	JP5
530h	Closed	Closed
604h	Open	Closed
E80h	Closed	Open
F40h	Open	Open

Continued next page...

MULTIWAVE INNOVATION, INC.  
AUDIO WAVE 16 AISP

... continued from previous page.

GAME PORT I/O ADDRESS SELECTION	
Address	JP1/A
í 201h	Open
200h - 207h	Closed

MIDI PORT I/O ADDRESS		
Address	JP1/B	JP1/C
í 330h - 331h	Open	Open
300h - 301h	Closed	Closed
310h - 311h	Open	Closed
320h - 321h	Closed	Open

MIDI PORT CONFIGURATION	
Setting	JP1/D
í Enabled	Open
Disabled	Closed

SOUND BLASTER I/O PORT ADDRESS SELECTION			
Address	JP1/E	JP1/F	JP1/G
í 220h	Open	Open	Open
220h	Closed	Open	Closed
210h	Closed	Closed	Open
230h	Closed	Open	Open
240h	Open	Closed	Closed
250h	Open	Closed	Open
260h	Open	Open	Closed

FM MODE CONFIGURATION	
Setting	JP1/H
í Enabled	Open
Disabled	Closed

GAME MODE CONFIGURATION	
Setting	JP1/I
í Enabled	Open
Disabled	Closed

CD-ROM I/O PORT ADDRESS SELECTION	
Address	JP3
í 340h	Open
320h	Closed

Continued next page...

MULTIWAVE INNOVATION, INC.  
AUDIO WAVE 16 AISP

... continued from previous page.

MIDI INTERRUPT SELECTION			
IRQ	JP2/A	JP2/B	JP2/C
í 2/9	Open	Open	Closed
5	Closed	Open	Open
7	Open	Closed	Open
Disabled	Open	Open	Open
Note: MIDI interrupt is used only for Panasonic & Sony CD-ROM interface.			