


ACER OPEN S30 16-BIT AUDIO CARD

Card Type	Sound card
Chipset Controller	Unidentified
I/O Options	CD-ROM interface, CD-ROM audio, game/MIDI port, line in, microphone in, PC speaker in, speaker/line out, volume, wavetable
Maximum DRAM	N/A

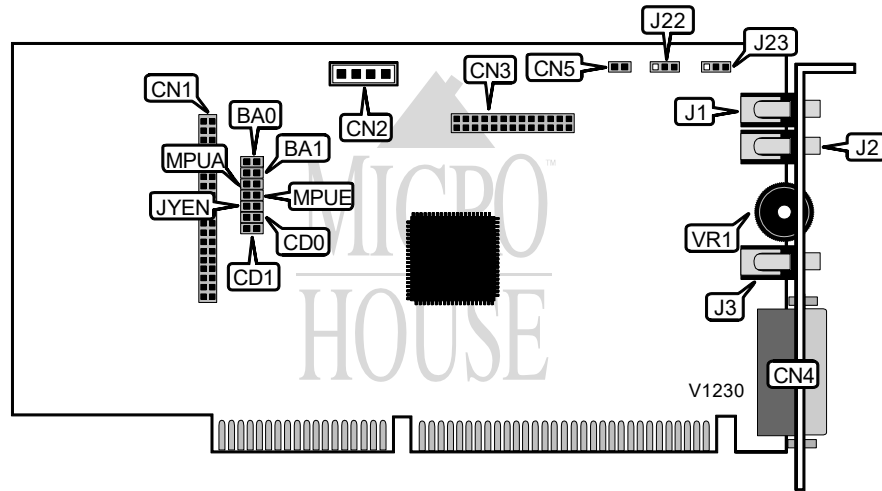

CONNECTIONS			
Purpose	Location	Purpose	Location
IDE CD-ROM interface	CN1	Speaker/line out	J1
CD-ROM audio in	CN2	Line in	J2
Wavetable module connector	CN3	Mic in	J3
Game/MIDI port	CN4	Volume	VR1
PC speaker in	CN5		

BASE I/O ADDRESS SELECTION		
Address	BA0	BA1
220h	Closed	Closed
240h	Open	Closed
260h	Closed	Open
280h	Open	Open

MPU-401 ADDRESS SELECTION	
Address	MPUA
330h	Closed
300h	Open

Continued next page...

ACER OPEN

S30 16-BIT AUDIO CARD

... continued from previous page.

MPU-401 CONFIGURATION	
Setting	MPUE
Enabled	Open
Disabled	Closed

GAME PORT CONFIGURATION	
Setting	JYEN
Enabled	Closed
Disabled	Open

CD-ROM INTERFACE CONFIGURATION		
Setting	CD0	CD1
Enabled	Closed	Closed
Disabled	Open	Open

AUDIO OUTPUT AMPLIFIER CONFIGURATION		
Setting	J22	J23
Line out	Pins 1 & 2 closed	Pins 1 & 2 closed
Speaker	Pins 2 & 3 closed	Pins 2 & 3 closed