


CREATIVE LABS, INC. SOUND & CD-ROM CARD

Card Type Sound card
Chipset Controller Unidentified
I/O Options CD-ROM audio (2), CD-ROM interface (3), game/MIDI port, line in, microphone in, speaker out, volume
Maximum DRAM N/A

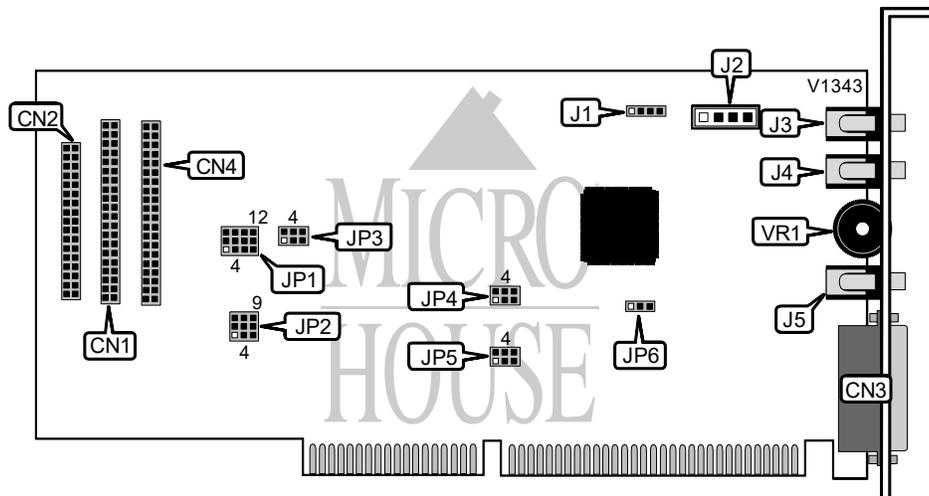

CONNECTIONS			
Purpose :	Location	Purpose :	Location
Panasonic CD-ROM interface	CN1	Panasonic/Mitsumi CD - audio in	J2
Sony CD-ROM interface	CN2	Mic in	J3
Game/MIDI port	CN3	Line in	J4
Mitsumi CD-ROM interface	CN4	Speaker out	J5
Sony CD - audio in	J1	Volume	VR1

INTERRUPT SELECTION	
IRQ	JP1
7	Pins 10 & 11 Closed
2/9	Pins 1 & 2 closed
3	Pins 4 & 5 closed
5	Pins 7 & 8 closed

Continued next page...

CREATIVE LABS, INC.
SOUND & CD-ROM CARD

... continued from previous page.

BASE I/O ADDRESS SELECTION	
Address	JP2
í 320h	Pins 2 & 3, 4 & 5, 8 & 9 closed
330h	Pins 1 & 2, 4 & 5, 8 & 9 closed
340h	Pins 2 & 3, 5 & 6, 7 & 8 closed
360h	Pins 2 & 3, 4 & 5, 7 & 8 closed

SOUND I/O PORT ADDRESS SELECTION	
Address	JP3
í 220h	Pins 3 & 5, 4 & 6 closed
240h	Pins 1 & 3, 2 & 4 closed

DMA CHANNEL SELECTION		
Channel	JP4	JP5
í DMA1	Pins 1 & 3 closed	Pins 1 & 3 closed
DMA3	Pins 2 & 4 closed	Pins 2 & 4 closed

GAME PORT CONFIGURATION	
Setting	JP6
í Enabled	Pins 1 & 2 closed
Disabled	Pins 2 & 3 closed