Card Type Fax, Modem (asynchronous)

Chip Set Unidentified

Maximum Data Rate 14.4Kbps

Maximum Fax Rate 14.4Kbps

Data Bus 8-bit ISA


Fax Class Class I & II

Data Modulation Protocol Bell 103/212A

ITU-T V.21, V.22A/B, V.22bis, V.23, V.32, V.32bis

Fax Modulation Protocol ITU-T V.17, V.21CH2, V.27ter, V.29

Error Correction/Compression MNP5, V.42, V.42bis

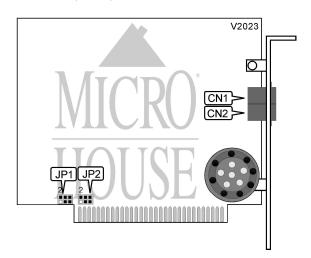

|          | CONNE | CTIONS   |       |
|----------|-------|----------|-------|
| Function | Label | Function | Label |
| Line in  | CN1   | Line out | CN2   |

| SERIAL PORT ADDRESS/INTERRUPT SELECTION |     |                          |                   |
|---|-----|--------------------------|-------------------|
| Setting                                 | IRQ | JP1                      | JP2               |
| COM1 (3F8h)                             | 4   | Pins 3 & 5, 4 & 6 closed | Pins 1 & 3 closed |
| COM2 (2F8h)                             | 3   | Pins 2 & 4, 3 & 5 closed | Pins 2 & 4 closed |
| COM3 (3E8h)                             | 4   | Pins 1 & 3, 4 & 6 closed | Pins 1 & 3 closed |
| í COM4 (2E8h)                           | 3   | Pins 1 & 3, 2 & 4 closed | Pins 2 & 4 closed |
| COM5 (3E8h)                             | 2   | Pins 1 & 3, 4 & 6 closed | Pins 4 & 6 closed |
| COM6 (2E8h)                             | 2   | Pins 1 & 3, 2 & 4 closed | Pins 4 & 6 closed |
| COM7 (3E8h)                             | 5   | Pins 1 & 3, 4 & 6 closed | Pins 3 & 5 closed |
| COM8 (2E8h)                             | 5   | Pins 1 & 3, 2 & 4 closed | Pins 3 & 5 closed |

. . . continued from previous page

### **Proprietary AT Command Set**

|              | AUTO-RETRAIN - AUTO-FALLBACK/FALL-FORWARD            |
|--------------|--|
| Type:        | Configuration  |
| Format:      | AT [cmds] %En [cmds]                                 |
| Description: | Controls auto-retrain mode and fallback/fall-forward |
| Command      | Function   |
| í %E0        | Auto-retrain disabled                                |
| %E1          | Auto-retrain enabled                                 |
| %E2          | Auto-fallback/fall-forward enabled                   |
| %E3          | Auto-fallback/fall-forward with fast hang-up enabled |

| BIT MAPPED | REGISTERS    |
|------------|--------------|
| Register   | Default      |
| S14        | Unidentified |
| S16        | Unidentified |
| S21        | Unidentified |
| S22        | Unidentified |
| S23        | Unidentified |
| S27        | Unidentified |
| S28        | Unidentified |
| S31        | Unidentified |
| S40        | Unidentified |
| S41        | Unidentified |

|              | BREAK SEND           |
|--------------|----------------------|
| Type:        | Configuration        |
| Format:      | AT [cmds] \Bn [cmds] |
| Default:     | 3                    |
| Range:       | 1-9                  |
| Unit:        | .1 second            |
| Description: | Sends break to modem |

|              | BREAK TYPE                        |
|--------------|-----------------------------------|
| Type:        | Configuration                     |
| Format:      | AT [cmds] \Kn [cmds]              |
| Default:     | Unidentified                      |
| Range:       | Unidentified                      |
| Description: | Configures action of break signal |

. . . continued from previous page

|              | DIAL  |
|--------------|---|
| Type:        | Immediate   |
| Format:      | AT [cmds] D<#> [cmds]   |
| Description: | Dials telephone number according to any modifiers included in the string                    |
| Note:        | Any combination of modifiers can be used to produce the desired dial functions in sequence. |
| Modifier     | Function  |
| L            | Re-dial last number   |
| Р            | Pulse dialing enabled   |
| R            | Command accepted, not acted upon.   |
| S=n          | Dial stored telephone number <i>n</i> ( <i>n</i> =0-3)                                      |
| T            | Tone dialing enabled  |
| W            | Dialing resumed following dial tone detection   |
| ,            | Dialing paused for amount of time specified in S8 register                                  |
| @            | Wait for 5 seconds of silence   |
| · ,          | Modem returned to command state after dialing   |
| !            | Modem commanded to go off-hook for specified time before returning on-hook.                 |
| ۸            | Calling tone enabled  |

| COMPRESSION  |                           |  |
|--------------|---------------------------|--|
| Type:        | Configuration             |  |
| Format:      | AT [cmds] %Cn [cmds]      |  |
| Description: | Selects data compression  |  |
| Command      | Function                  |  |
| %C0          | Data compression disabled |  |
| %C1          | MNP5 enabled              |  |
| %C2          | V.42bis enabled           |  |
| í %C3        | MNP5 and V.42bis enabled  |  |

| CONNECT MODE |   |  |
|--------------|---|--|
| Type:        | Configuration   |  |
| Format:      | AT [cmds] \Nn [cmds]                                      |  |
| Description: | Controls the type of connection the modem will operate in |  |
| Command      | Function  |  |
| \N0          | Normal mode enabled                                       |  |
| \N1          | Direct mode enabled                                       |  |
| \N2          | Reliable mode enabled                                     |  |
| í \N3        | Auto-reliable mode enabled                                |  |
| \N4          | V.42 reliable mode enabled                                |  |
| \N5          | MNP reliable mode enabled                                 |  |

. . . continued from previous page

|              | FLASH DIAL MODIFIER TIME  |
|--------------|---|
| Type:        | Register  |
| Format       | AT [cmds] S29=n [cmds]  |
| Default:     | 0   |
| Range:       | 0-255   |
| Unit:        | .01 second  |
| Description: | Time the modem will go on-hook upon receiving the ! dial modifier in dial string. S29=0 will disable. |

|              | FLOW CONTROL                    |
|--------------|---------------------------------|
| Type:        | Configuration                   |
| Format:      | AT [cmds] \Gn [cmds]            |
| Description: | Selects modem port flow control |
| Command      | Function                        |
| í \G0        | Flow control disabled           |
| \G1          | Flow control enabled            |

|              | FLOW CONTROL                              |
|--------------|---|
| Type:        | Read-only Register                        |
| Format       | AT [cmds] S39? [cmds]                     |
| Description: | Displays the current flow control         |
| Value        | Meaning                                   |
| 0            | Flow control disabled                     |
| í 3          | RTS/CTS flow control enabled              |
| 4            | XON/XOFF flow control enabled             |
| 5            | Transparent XON flow control enabled      |
| 6            | Transparent XON/XOFF flow control enabled |

|              | FLOW CONTROL CHARACTER - XOFF             |
|--------------|---|
| Type:        | Register                                  |
| Format:      | AT [cmds] S33=n [cmds]                    |
| Default:     | 19  |
| Range:       | 0-255                                     |
| Unit:        | ASCII                                     |
| Description: | Sets the character used to represent XOFF |

|              | FLOW CONTROL CHARACTER - XON             |
|--------------|--|
| Type:        | Register                                 |
| Format:      | AT [cmds] S32= <i>n</i> [cmds]           |
| Default:     | 17                                       |
| Range:       | 0-255                                    |
| Unit:        | ASCII                                    |
| Description: | Sets the character used to represent XON |

. . . continued from previous page

|              | INACTIVITY TIMER   |
|--------------|--|
| Type:        | Register   |
| Format:      | AT [cmds] S30= <i>n</i> [cmds]   |
| Default:     | 0  |
| Range:       | 0-255  |
| Unit:        | 10 seconds   |
| Description: | Sets the length of time that the modem does not receive information before it disconnects. S30=0 will disable timer. |

|              | LINE SIGNAL LEVEL   |
|--------------|---|
| Type:        | Immediate   |
| Format:      | AT [cmds] %L [cmds]   |
| Description: | Returns a value which indicates the received line signal level (-dBm) |

|              | LINE SIGNAL QUALITY                                 |
|--------------|---|
| Type:        | Immediate   |
| Format:      | AT [cmds] %Q [cmds]                                 |
| Description: | Returns a value which indicates line signal quality |

|              | MAXIMUM BLOCK SIZE FOR TRANSMISSION       |
|--------------|---|
| Type:        | Configuration                             |
| Format:      | AT [cmds] \An [cmds]                      |
| Description: | Sets the maximum transmittable block size |
| Command      | Function                                  |
| \A0          | MNP block size is 64 characters           |
| í ∖A1        | MNP block size is 128 characters          |
| \A2          | MNP block size is 192 characters          |
| \A3          | MNP block size is 256 characters          |

|              | MNP - STREAM/BLOCK MODE                |
|--------------|--|
| Type:        | Configuration                          |
| Format:      | AT [cmds] \Ln [cmds]                   |
| Description: | Selects the transfer mode for MNP link |
| Command      | Function                               |
| í \LO        | Stream mode for MNP enabled            |
| \L1          | Block mode for MNP enabled             |

. . . continued from previous page

|              | REPORT INFORMATION                        |
|--------------|---|
| Type:        | Immediate                                 |
| Format:      | AT [cmds] In [cmds]                       |
| Description: | Displays information requested            |
| Command      | Function                                  |
| 10           | Reports 3-digit product code              |
| I1           | Reports ROM checksum                      |
| 12           | Tests and reports ROM checksum            |
| 13           | Reports firmware revision code            |
| 14           | Reports faxmodem identifier string        |
| 15           | Reports country code                      |
| 16           | Reports data pump model and revision code |

|              | SLEEP TIMER  |
|--------------|--|
| Type:        | Register   |
| Format       | AT [cmds] S24=n [cmds]   |
| Default:     | 0  |
| Range:       | 0-255  |
| Unit:        | 1 second   |
| Description: | Maximum duration of DTE and DCE inactivity allowed prior to initiating low-power |
|              | sleep mode.  |