


TANDY/RADIO SHACK MEMORY EXPANSION ADAPTER (250-4027)

Card Type Memory
Maximum Onboard Memory 8MB DRAM
Data Bus Tandy 3000NL memory expansion bus

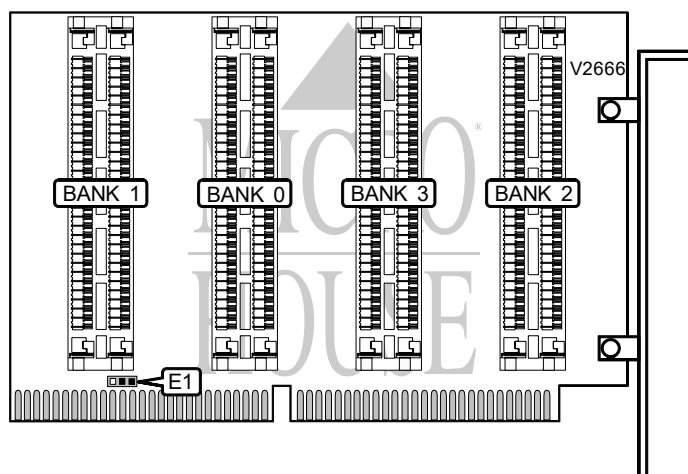

USER CONFIGURABLE SETTINGS		
Setting	Label	Position
Computer has one memory expansion slot	E1	Pins 2 & 3 closed
Computer has two memory expansion slots	E1	Pins 1 & 2 closed
Note: E1 may not be present on all versions of this card.		

DRAM CONFIGURATION				
Setting	Bank 0	Bank 1	Bank 2	Bank 3
512KB	(2) 256K x 9	None	None	None
1MB	(2) 256K x 9	(2) 256K x 9	None	None
1.5MB	(2) 256K x 9	(2) 256K x 9	(2) 256K x 9	None
2MB	(2) 256K x 9	(2) 256K x 9	(2) 256K x 9	(2) 256K x 9
2MB	(2) 1M x 9	None	None	None
2.5MB	(2) 256K x 9	(2) 1M x 9	None	None
3MB	(2) 256K x 9	(2) 256K x 9	(2) 1M x 9	None
3.5MB	(2) 256K x 9	(2) 256K x 9	(2) 256K x 9	(2) 1M x 9
4MB	(2) 1M x 9	(2) 1M x 9	None	None
4.5MB	(2) 256K x 9	(2) 1M x 9	(2) 1M x 9	None
5MB	(2) 256K x 9	(2) 256K x 9	(2) 1M x 9	(2) 1M x 9
6MB	(2) 1M x 9	(2) 1M x 9	(2) 1M x 9	None
6.5MB	(2) 256K x 9	(2) 1M x 9	(2) 1M x 9	(2) 1M x 9
8MB	(2) 1M x 9	(2) 1M x 9	(2) 1M x 9	(2) 1M x 9
Note: The memory installed on the mainboard must be removed in order to use this card. Within each bank, the SIMMs must be the same size. Banks may contain either 256K or 1M SIMMs.				