


TANDY/RADIO SHACK MEMORY EXPANSION BOARD (250-4030)

Card Type Memory
Maximum Onboard Memory 2MB DRAM
Data Bus 16-bit ISA

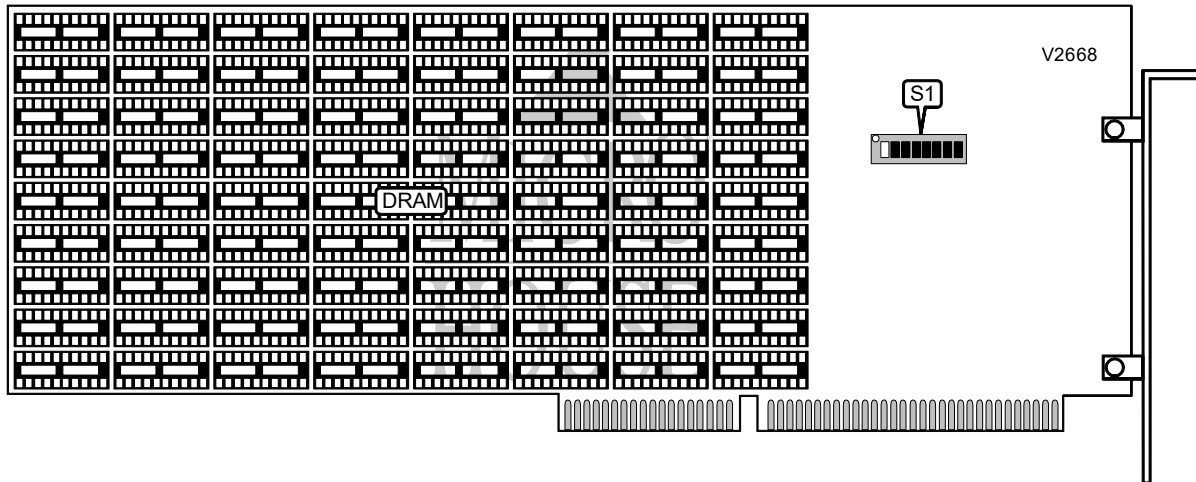

USER CONFIGURABLE SETTINGS		
Setting	Label	Position
í Factory configured - do not alter	S1/1	Off
í Factory configured - do not alter	S1/7	N/A
í Memory in Bank 1 enabled	S1/8	Off
Memory in Bank 1 disabled	S1/8	On
Note: Bank 1 should be disabled only if the board number is set to 1.		

DRAM CONFIGURATION				
Size	Bank 0	Bank 1	Bank 2	Bank 3
512KB	(18) 256K x 1	None	None	None
1MB	(18) 256K x 1	(18) 256K x 1	None	None
1.5MB	(18) 256K x 1	(18) 256K x 1	(18) 256K x 1	None
2MB	(18) 256K x 1	(18) 256K x 1	(18) 256K x 1	(18) 256K x 1
Note: The exact location of each bank is unidentified.				

DRAM JUMPER SELECTION		
Size	S1/5	S1/6
512KB	On	On
í 1MB	Off	On
1.5MB	On	Off
2MB	Off	Off

Continued on next page. . .

TANDY/RADIO SHACK MEMORY EXPANSION BOARD (250-4030)

. . . continued from previous page

BOARD NUMBER SELECTION				
Number	Address	S1/2	S1/3	S1/4
1	100000h	On	On	On
2	300000h	Off	On	On
3	500000h	On	Off	On
4	700000h	Off	Off	On
5	900000h	On	On	Off
6	B00000h	Off	On	Off
7	D00000h	On	Off	Off