


# TANDY/RADIO SHACK EGA/CGA GRAPHICS BOARD (250-3048)

<b>Card Type</b>	Video card
<b>Video Processor</b>	6845
<b>Maximum Onboard Memory</b>	256KB DRAM
<b>Data Bus</b>	8-bit ISA
<b>Video Types Supported</b>	Plantronics, EGA
<b>Highest Resolution Supported</b>	720 x 350

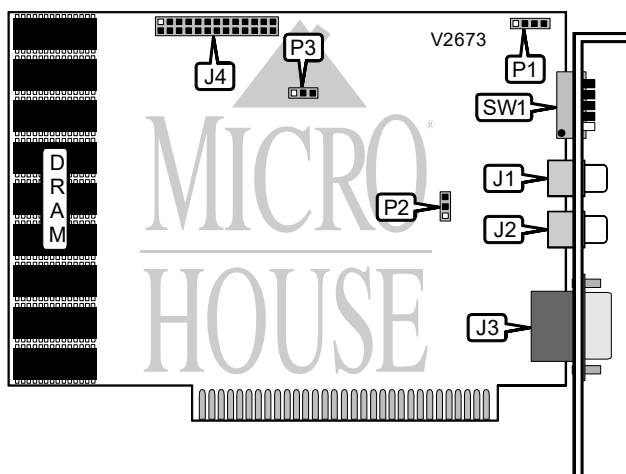

CONNECTIONS			
Function	Label	Function	Label
Not used	J1	9-pin video out connector	J3
Not used	J2	Not used	J4

USER CONFIGURABLE SETTINGS		
Setting	Label	Position
Factory configured - do not alter	P1	Unidentified
EGA mode base I/O address set to 3D0h	P3	Pins 1 & 2 closed
EGA mode base I/O address set to 2D0h	P3	Pins 2 & 3 closed
Card will use EGA mode by default	SW1/5	Off
Card will use CGA or monochrome mode by default	SW1/5	On
Note: SW1/5 must always be turned off for Tandy SX and TX model mainboards.		

MONITOR TYPE SELECTION					
Setting	P2	SW1/1	SW1/2	SW1/3	SW1/4
Monochrome	Pins 2 & 3	Off	Off	On	Off
CGA	Pins 2 & 3	Off	Off	Off	On
EGA	Pins 1 & 2	Off	On	On	Off
Note: Pins designated are in the closed position.					