


CREATIVE LABS, INC. SOUNDBLASTER AWE32 (CT3780)

Card Type	Sound card
Chip Set	Unidentified
Maximum Onboard Memory	None
I/O Options	Game/MIDI port, CD-ROM interface (3), speaker out, line out, line in, microphone in, CD-ROM audio in, PC speaker connector
Data Bus	16-bit ISA

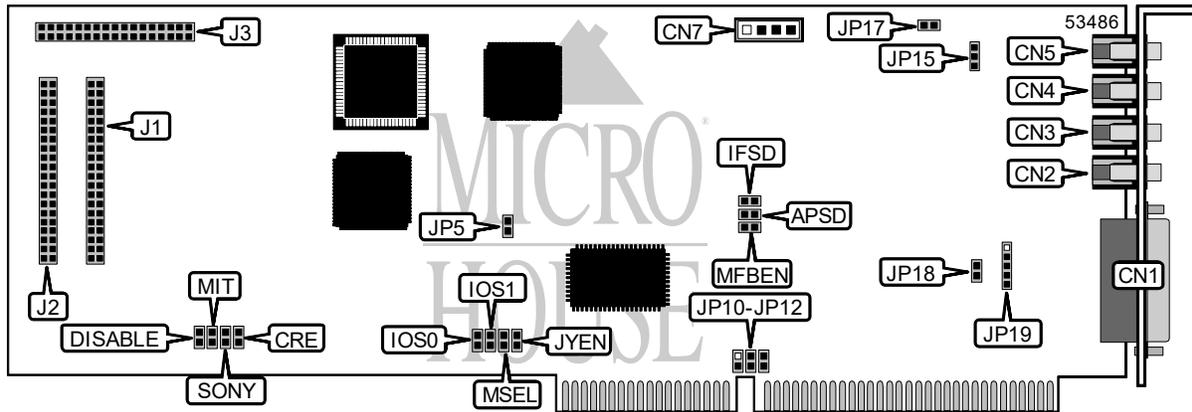

CONNECTIONS			
Function	Label	Function	Label
Game/MIDI port	CN1	Audio in - CD-ROM	CN7
Speaker out	CN2	CD-ROM interface - Creative	J1
Line out	CN3	CD-ROM interface - Mitsumi	J2
Microphone in	CN4	CD-ROM interface - Sony	J3
Line in	CN5	PC speaker connector	JP17

USER CONFIGURABLE SETTINGS			
Function	Label	Position	
í Factory default - do not alter	JP5	Closed	
í Factory default - do not alter	JP18	Closed	
í Factory default - do not alter	JP19	Unidentified	
í Joystick enabled	JYEN	Closed	
Joystick disabled	JYEN	Open	
í MPU-401 port enabled	MFBE N	Closed	
MPU-401 port disabled	MFBE N	Open	

AUDIO I/O ADDRESS SELECTION			
Address	IOS0	IOS1	
í 220h	Closed	Closed	
240h	Open	Closed	
260h	Closed	Open	
280h	Open	Open	

Continued on next page . . .

CREATIVE LABS, INC.
 SOUNDBLASTER AWE32 (CT3780)

. . . continued from previous page

MPU-401 I/O ADDRESS SELECTION	
Address	MSEL
300h	Closed
í 330h	Open

MITSUMI CD-ROM INTERRUPT SELECTION			
IRQ	JP10	JP11	JP12
IRQ3	Open	Open	Closed
IRQ10	Open	Closed	Open
IRQ11	Closed	Open	Open

CD-ROM TYPE SELECTION				
Setting	CRE	SONY	MIT	DISABLE
Creative	Closed	Open	Open	Open
Sony	Open	Closed	Open	Open
Mitsumi	Open	Open	Closed	Open
Disable	Open	Open	Open	Closed

CSP CHIP SELECTION		
	IFSD	APSD
í Disabled	Closed	Closed
Enabled	Open	Open