


CREATIVE LABS, INC. VIBRA 16

Card Type	Sound card
Chip Set	Unidentified
Maximum Onboard Memory	Unidentified
I/O Options	Game/MIDI port, CD-ROM audio in (2), microphone in, line in, line out, speaker out, wavetable connector, PC speaker connector
Data Bus	16-bit ISA

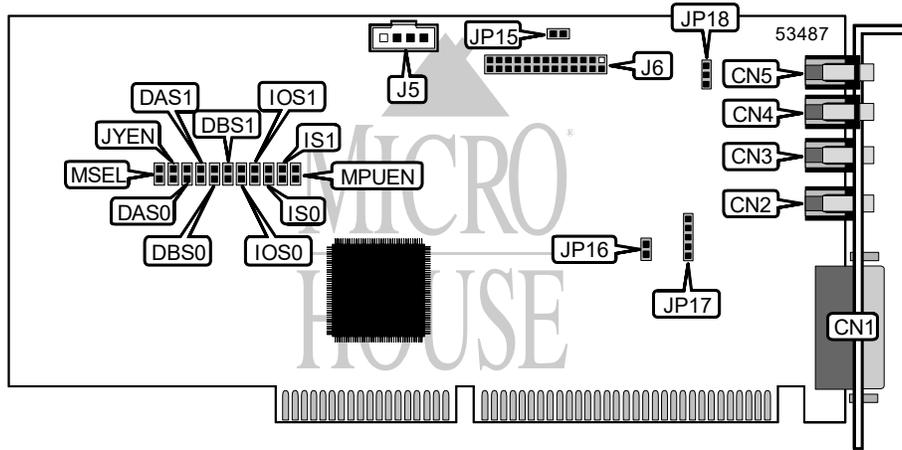

CONNECTIONS			
Function	Label	Function	Label
Game/MIDI port	CN1	Line in	CN5
Speaker out	CN2	Audio in - CD-ROM	J5
Line out	CN3	Feature connector	J6
Microphone in	CN4	PC speaker connector	JP15

USER CONFIGURABLE SETTINGS		
Function	Label	Position
í Factory configured - do not alter	JP16	Closed
í Factory configured - do not alter	JP17	Unidentified
í Factory configured - do not alter	JP18	Unidentified
í MPU I/O address 330h	MSEL	Closed
MPU I/O address 300h	MSEL	Open
í MPU-401 enabled	MPUEN	Closed
MPU-401 disabled	MPUEN	Open
í Joystick enabled	JYEN	Closed
Joystick disabled	JYEN	Open

BASE I/O ADDRESS		
Setting	IOS0	IOS1
í 220h	Closed	Closed
240h	Open	Closed
260h	Closed	Open
280h	Open	Open

Continued on next page . . .

CREATIVE LABS, INC.
 16-BIT AUDIO CARD (IDE VER.1.0)

. . . continued from previous page

LOW DMA CHANNEL SELECTION		
Setting	DAS0	DAS1
DMA 0	Closed	Closed
í DMA 1	Open	Closed
DMA 3	Closed	Open
Low DMA disabled	Open	Open

HIGH DMA CHANNEL SELECTION		
Setting	DBS0	DBS1
í DMA 5	Closed	Closed
DMA 6	Open	Closed
DMA 7	Closed	Open
Low DMA selected	Open	Open

INTERRUPT SELECTION		
IRQ	IS0	IS1
2	Closed	Closed
í 5	Open	Closed
7	Closed	Open
10	Open	Open