


# CREATIVE LABS, INC. SOUNDBLASTER PRO 1 (CT1330)

**Card Type** Sound card  
**Chip Set** Creative Technology  
**I/O Options** Line in, line out, microphone in, volume control, game/MIDI port, audio in  
 - CD-ROM, PC speaker connector, CD-ROM interface  
**Data Bus** 8-bit ISA

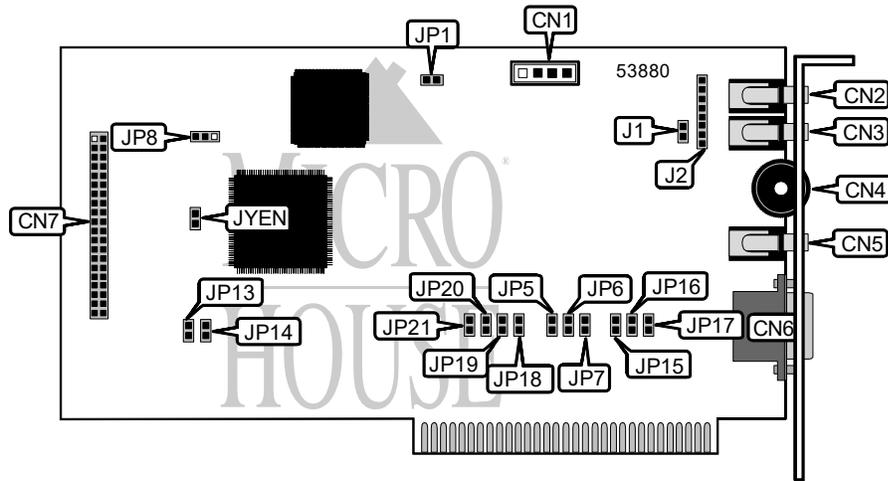

CONNECTIONS			
Function	Label	Function	Label
Audio in CD-ROM	CN1	Speaker out	CN5
Line in	CN2	Game/MIDI port	CN6
Microphone in	CN3	CD-ROM interface - Panasonic	CN7
Volume control	CN4	PC speaker connector	JP1

USER CONFIGURABLE SETTINGS			
Function	Label	Position	
í Factory configured – do not alter	J1	Unidentified	
í Factory configured – do not alter	J2	Unidentified	
í Sharing DMA disabled	JP8	Pins 1 & 2 closed	
Sharing DMA enabled	JP8	Pins 2 & 3 closed	
í Joystick enabled	JYEN	Closed	
Joystick disabled	JYEN	Open	

Continued on next page. . .

CREATIVE LABS, INC.  
SOUNDBLASTER PRO 1 (CT1330)

... continued from previous page

8-BIT DMA CHANNEL SELECTION						
Channel	JP5	JP6	JP7	JP15	JP16	JP17
0	Closed	Open	Open	Closed	Open	Open
1	Open	Closed	Open	Open	Closed	Open
3	Open	Open	Closed	Open	Open	Closed

AUDIO I/O ADDRESS SELECTION		
Address	JP13	JP14
220	Closed	Open
240	Open	Closed

I INTERRUPT SELECTION				
IRQ	JP18	JP19	JP20	JP21
2	Open	Open	Open	Closed
5	Open	Open	Closed	Open
7	Open	Closed	Open	Open
10	Closed	Open	Open	Open