


# TANDY/RADIO SHACK CDR-3100 INTERFACE BOARD

|             |  |
|-------------|--|
| Card Type   | Multi-I/O card   |
| Chip Set    | Unidentified   |
| I/O Options | CD-ROM interface, audio line out/right, audio line out/left, audio in - CD-ROM |
| Data Bus    | 8-bit ISA  |
| Card Size   | Half-length, half-height card  |

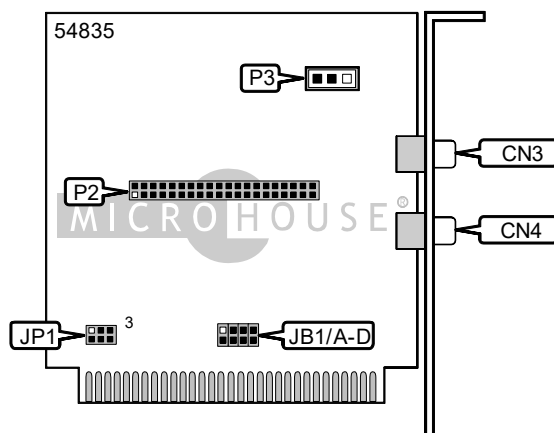

| CONNECTIONS       |       |                        |       |
|-------------------|-------|------------------------|-------|
| Function          | Label | Function               | Label |
| CD-ROM interface  | P2    | Audio line out - right | CN3   |
| Audio in - CD-ROM | P3    | Audio line out - left  | CN4   |

| BUS ADDRESS |                          |
|-------------|--------------------------|
| Address     | JP1                      |
| 300h        | Pins 1 & 2, 4 & 5 closed |
| 310h        | Pins 2 & 3, 4 & 5 closed |
| 330h        | Pins 1 & 2, 5 & 6 closed |
| í 340h      | Pins 2 & 3, 5 & 6 closed |

| IRQ SETTINGS |        |        |        |        |
|--------------|--------|--------|--------|--------|
| IRQ          | JB1/A  | JB1/B  | JB1/C  | JB1/D  |
| í 3          | Closed | Open   | Open   | Open   |
| 4            | Open   | Closed | Open   | Open   |
| 5            | Open   | Open   | Closed | Open   |
| 6            | Open   | Open   | Open   | Closed |

| TECHNICAL NOTE  |  |
|---|--|
| Note: Only use this card with the CDR-3100 (250-1098) CD-ROM drive. |  |