


BUSLOGIC, INC.

FLASHPOINT LW HOST ADAPTER

| | |
|-------------------------|--------------------------------------|
| Data Bus | 32-bit PCI |
| Card Size | Half-length, half-height card |
| Hard Drives supported | Up to 7 SCSI or 15 Wide SCSI devices |
| Floppy drives supported | None |

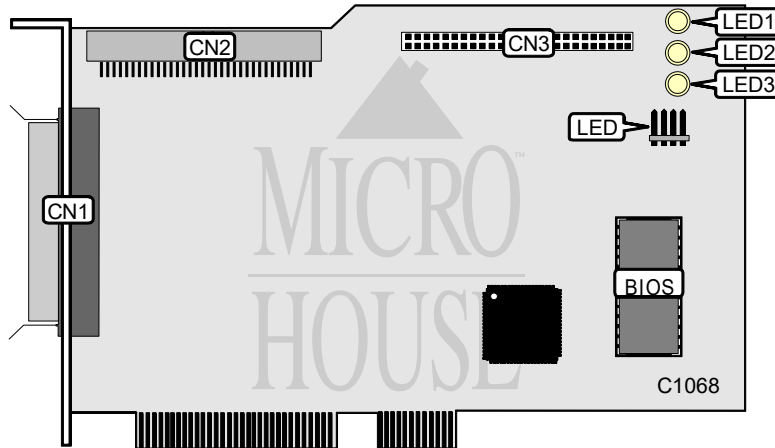

| CONNECTIONS | | | |
|----------------------------------|----------|----------------------------------|----------|
| Function | Location | Function | Location |
| 68-pin SCSI connector - external | CN1 | 50-pin SCSI connector - internal | CN3 |
| 68-pin SCSI connector - internal | CN2 | LED connector | LED |

| DIAGNOSTIC LED(S) | | | |
|-------------------|--------------|--------|---------------------------|
| LED | Color | Status | Condition |
| LED1 | Unidentified | On | Activity detected |
| LED1 | Unidentified | Off | Activity not detected |
| LED2 | Green | On | Low termination enabled |
| LED2 | Green | Off | Low termination disabled |
| LED3 | Green | On | High termination enabled |
| LED3 | Green | Off | High termination disabled |

| TECHNICAL NOTES | |
|---|--|
| <p>Note: The FlashPoint LW host adapter automatically configures its own termination according to its placement within the SCSI bus. The low termination LED indicates that bits 0-7 of SCSI bus are terminated on the board. The high termination LED indicates that bits 8-15 of SCSI bus are terminated.</p> | |
| <p>Note: Only two connectors may be used at one time.</p> | |