


TRANTOR SYSTEMS, LTD.
T128

Q4/92

Data bus: 8-bit, ISA
Size: Three-quarter length, full-height card
Hard drives supported: Up to seven SCSI devices
Floppy drives supported: None

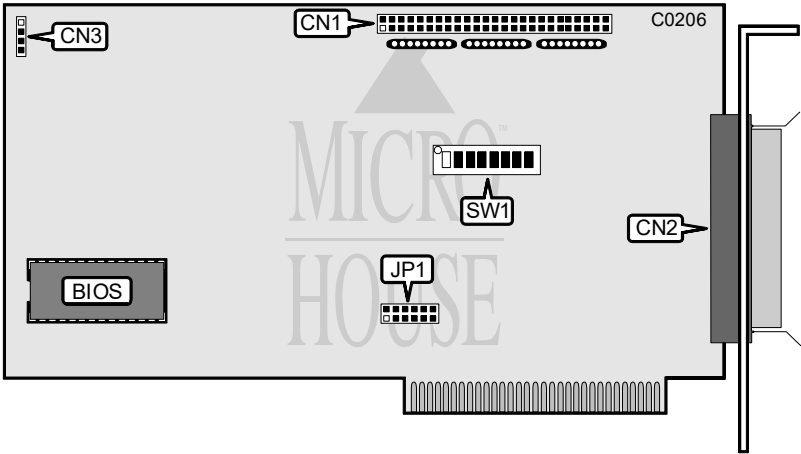

CONNECTIONS		
Function		Location
50-pin SCSI connector-internal		CN1
50-pin SCSI connector-external		CN2
4-pin connector-Drive Active LED		CN3

USER CONFIGURABLE SETTINGS		
Function	Location	Setting
<input type="checkbox"/> Full Handshake Interlock disabled	SW1/switch 4	off
<input type="checkbox"/> Full Handshake Interlock enabled	SW1/switch 4	on
<input type="checkbox"/> BIOS enabled	SW1/switch 5	on
<input type="checkbox"/> BIOS disabled	SW1/switch 5	off
<input type="checkbox"/> Zero wait-state enabled	SW1/switch 6	on
<input type="checkbox"/> Zero wait-state disabled	SW1/switch 6	off

Continued on next page . . .

TRANTOR SYSTEMS, LTD. T128

. . . continued from previous page

BIOS ADDRESS		
Address	SW1/switch 7	SW1/switch 8
CC000h	on	on
C8000h	on	off
DC000h	off	on
D8000h	off	off

INTERRUPT REQUEST		
IRQ	JP1	Position
IRQ3	pins 2 & 4 only	closed
IRQ5	pins 1 & 3 only	closed
IRQ7	pins 3 & 5 only	closed
Disabled	pins 1 through 6	open

MISCELLANEOUS TECHNICAL NOTES	
Note: SW1/switch 1-3 are reserved and must be left 'open'. JP1/pins 7-12 are not used.	