


SONY CORPORATION

CDU-31A ADAPTER BOARD

| | |
|-------------------------|-------------------------------|
| Card Type | CD-ROM drive controller card |
| Chipset | Unidentified |
| Maximum onboard memory | Unidentified |
| I/O options | CD-ROM audio in, line out |
| Hard Drives supported | None |
| Floppy drives supported | None |
| Data Bus | 8-bit ISA |
| Card Size | Half-length, full-height card |

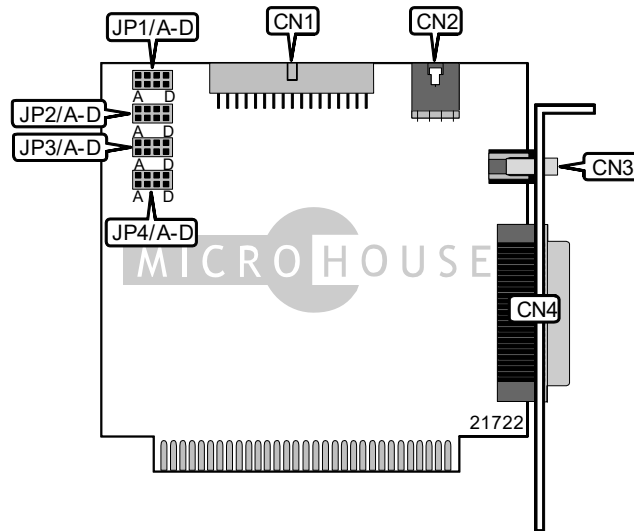

| CONNECTIONS | | | |
|--|----------|--|----------|
| Function | Location | Function | Location |
| 34-pin proprietary CD-ROM interface - internal | CN1 | Line out | CN3 |
| Audio in - CD-ROM | CN2 | 50-pin proprietary CD-ROM connector - external | CN4 |

| USER CONFIGURABLE SETTINGS | | | |
|-------------------------------------|-------|----------|--|
| Function | Label | Position | |
| í Factory configured - do not alter | JP1/C | Reserved | |
| í Factory configured - do not alter | JP1/D | Reserved | |
| í Factory configured - do not alter | JP2/D | Reserved | |
| í Factory configured - do not alter | JP3/D | Reserved | |

| DMA CHANNEL SELECTION | | | | | | |
|-----------------------|-------|-------|-------|-------|-------|-------|
| Channel | JP2/A | JP2/B | JP2/C | JP3/A | JP3/B | JP3/C |
| 1 | On | Off | Off | On | Off | Off |
| 2 | Off | On | Off | Off | On | Off |
| 3 | Off | Off | On | Off | Off | On |

| INTERRUPT SELECTION | | | | |
|---------------------|-------|-------|-------|-------|
| IRQ | JP4/A | JP4/B | JP4/C | JP4/D |
| 3 | Off | Off | On | Off |
| 4 | Off | On | Off | On |
| 5 | On | Off | Off | Off |
| 6 | Off | On | Off | Off |

Continued on next page . . .

SONY CORPORATION

CDU-31A ADAPTER BOARD

. . . continued from previous page

| BASE I/O ADDRESS SELECTION | | |
|----------------------------|--------|--------|
| Address | JP1/A | JP1/B |
| 320h | Closed | Closed |
| 330h | Closed | Open |
| 340h | Open | Closed |
| 360h | Open | Open |