


IBM CORPORATION  
PC NETWORK ADAPTER II (BROADBAND)

NIC Type	Broadband
Transfer Rate	Unidentified
Data Bus	8-bit ISA
Topology	Star
Wiring Type	RG-11/U RG-59A/U coaxial
Boot ROM	Not Available

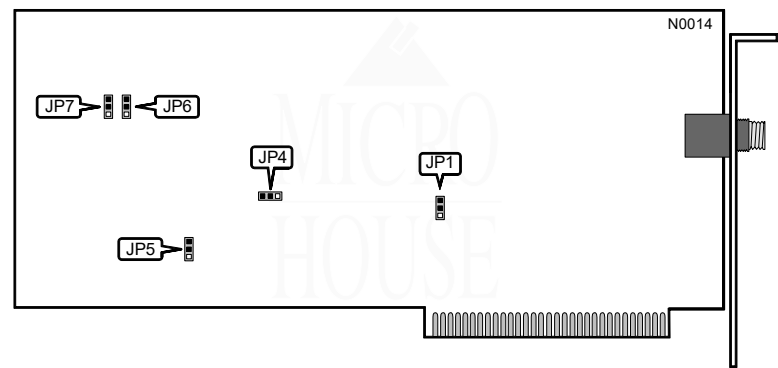

INTERRUPT REQUEST SELECTION	
IRQ	JP1
i2	Pins 1 & 2 closed
3	Pins 2 & 3 closed

I/O ADDRESS SELECTION	
Address	JP4
i620h	Pins 1 & 2 closed
628H	Pins 2 & 3 closed

BASE MEMORY ADDRESS SELECTION	
Address	JP5
iCC00h	Pins 1 & 2 closed
DC00h	Pins 2 & 3 closed

Continued on next page . . .

# IBM CORPORATION PC NETWORK ADAPTER II (BROADBAND)

... continued from previous page

ROM BIOS CONFIGURATION	
Setting	JP7
Disabled	Pins 2 & 3 closed
Enabled	Pins 1 & 2 closed

BOOT ROM	
Setting	JP6
Disabled	Pins 1 & 2 closed
Enabled	Pins 2 & 3 closed

MISCELLANEOUS TECHNICAL NOTES	
The DMA channel is permanently fixed at 3. If two adapters will be installed into one station then disable the ROM BIOS on the second adapter.	