


**Chapter 5: Jumper Settings**  
**MICRODYNE CORPORATION**  
**N T R 2 0 0 0**

<b>NIC Type</b>	Token Ring
<b>Transfer Rate</b>	4/16Mbps
<b>Data Bus</b>	16-bit ISA
<b>Topology</b>	Ring
<b>Wiring Type</b>	AUI Transceiver via DB-15 port
<b>Boot ROM</b>	Available

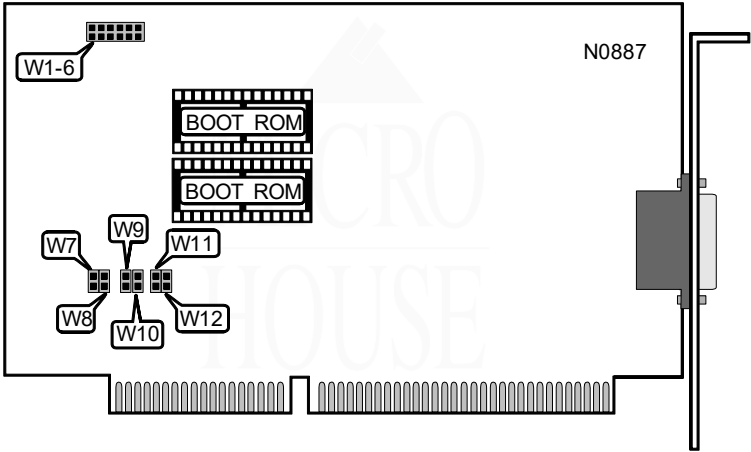

INTERRUPT SELECTION		
IRQ	W7	W8
2	Open	Open
3	Open	Closed
6	Closed	Open
7	Closed	Closed

NETWORK SPEED SELECTION	
Speed	W11
4Mbps	Open
16Mbps	Closed

SHARED RAM SIZE		
Size	W9	W10
8Kb	Open	Open
16Kb	Open	Closed
32Kb	Closed	Open
64Kb	Closed	Closed

Continued next page...

**THE NETWORK INTERFACE CARD TECHNICAL GUIDE**  
**MICRODYNE CORPORATION**  
**N T R 2 0 0 0**

... continued from previous page.

ROM ADDRESS						
Address	W1	W2	W3	W4	W5	W6
i CC00h	Closed	Open	Open	Closed	Closed	Open
C000h	Closed	Open	Open	Open	Open	Open
C200h	Closed	Open	Open	Open	Open	Closed
C400h	Closed	Open	Open	Open	Closed	Open
C600h	Closed	Open	Open	Open	Closed	Closed
C800h	Closed	Open	Open	Closed	Open	Open
CA00h	Closed	Open	Open	Closed	Open	Closed
CE00h	Closed	Open	Open	Closed	Closed	Closed
D000h	Closed	Open	Closed	Open	Open	Open
DC00h	Closed	Open	Closed	Closed	Closed	Open
Note: Address DC00h is manufacturer's suggested alternate default setting						

ADAPTER		
Selection	Port Addresss/Shared Memory	W12
Primary	00A20h/D8000h	Open
Alternate	00A24h/D4000h	Closed