


Chapter 5: Jumper Settings

OLIVETTI

NCU 9143/S

NIC Type	Ethernet
Transfer Rate	10Mbps
Data Bus	16-bit ISA
Topology	Star
Wiring Type	Unshielded Twisted Pair
Boot ROM	Not available

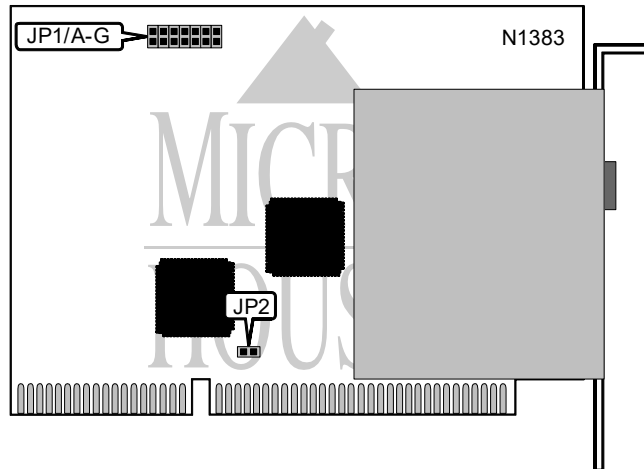

MEMORY CONFIGURATION	
Size	JP1/G
16KB	Open
64KB	Closed

BIOS ADDRESS SELECTION				
Address	Window	JP1/A	JP1/B	JP1/C
C000h	16K	Closed	Closed	Closed
C400h	16K	Closed	Closed	Open
C800h	16K	Closed	Open	Closed
CC00h	16K	Closed	Open	Open
D000h	16K	Open	Closed	Closed
D400h	16K	Open	Closed	Open
D800h	16K	Open	Open	Closed
DC00h	16K	Open	Open	Open
C000h	32K	Closed	Closed	Open
C800h	32K	Closed	Open	Open
D000h	32K	Open	Closed	Open
D800h	32K	Open	Open	Open
C000h	64K	Closed	Open	Open
D000h	64K	Open	Open	Open

Continued next page...

THE NETWORK INTERFACE CARD TECHNICAL GUIDE
OLIVETTI
NCU 9143/S

... continued from previous page.

MEGA POWER ON MEMORY CONFIGURATION	
Setting	JP1/F
i MEGA O	Open
MEGA F	Closed

PARAMETER SELECTION	
Setting	JP1/E
i Native	Closed
Emulation	Open

FACTORY CONFIGURED - DO NOT ALTER	
Jumper/Switch	Position
JP1/A	Closed
JP2	N/A