


EDIMAX COMPUTER CORPORATION

2000RA 10BASE-T

| | |
|-----------------------|-----------------------------------|
| NIC Type | Ethernet |
| Network Transfer Rate | 10Mbps |
| Data Bus | 16-bit ISA |
| Topology | Star |
| Wiring Type | Unshielded twisted pair |
| Boot ROM | Available (location unidentified) |

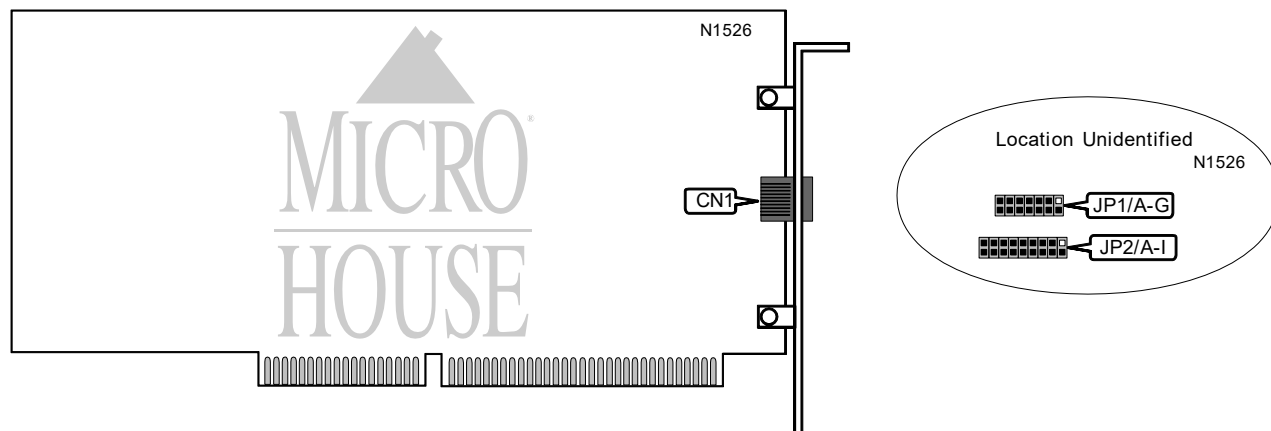

| CONNECTIONS | |
|-----------------------------|-------|
| Function | Label |
| RG-58A/U 50ohm coaxial port | CN1 |

| USER CONFIGURABLE SETTINGS | | |
|--|-------|----------|
| Function | Label | Position |
| í Boot ROM Disabled | JP1/A | Open |
| Boot ROM Enabled | JP1/A | Closed |
| í Software configuration - Jumperless mode | JP2/A | Closed |
| Hardware configuration - Jumpered mode | JP2/A | Open |

| BASE I/O ADDRESS SELECTION | | | |
|----------------------------|--------|--------|--------|
| Address | JP1/E | JP1/F | JP1/G |
| 200h | Closed | Open | Open |
| 220h | Closed | Open | Closed |
| 240h | Closed | Closed | Open |
| 260h | Closed | Closed | Closed |
| 300h | Open | Open | Open |
| 320h | Open | Open | Closed |
| 340h | Open | Closed | Open |
| 360h | Open | Closed | Closed |

Continued on next page. . .

EDIMAX COMPUTER CORPORATION

2000RA 10BASE-T

. . . continued from previous page

| INTERRUPT SELECTION | | | | | | | | |
|--|--------|--------|--------|--------|--------|--------|--------|--------|
| IRQ | JP2/B | JP2/C | JP2/D | JP2/E | JP2/F | JP2/G | JP2/H | JP2/I |
| 2 | Closed | Open | Open | Open | Open | Open | Open | Open |
| 3 | Open | Closed | Open | Open | Open | Open | Open | Open |
| 4 | Open | Open | Closed | Open | Open | Open | Open | Open |
| 5 | Open | Open | Open | Closed | Open | Open | Open | Open |
| 10 | Open | Open | Open | Open | Closed | Open | Open | Open |
| 11 | Open | Open | Open | Open | Open | Closed | Open | Open |
| 12 | Open | Open | Open | Open | Open | Open | Closed | Open |
| 15 | Open | Open | Open | Open | Open | Open | Open | Closed |
| Note: When setting IRQ leave JP2/A open. | | | | | | | | |

| ROM SIZE SELECTION | | | |
|---|--------|--------|--------|
| Size | JP1/B | JP1/C | JP1/D |
| C0000h | Open | Open | Open |
| C4000h | Open | Open | Closed |
| C8000h | Open | Closed | Open |
| CC000h | Open | Closed | Closed |
| D0000h | Closed | Open | Open |
| D4000h | Closed | Open | Closed |
| D8000h | Closed | Closed | Open |
| DC000h | Closed | Closed | Closed |
| Note: When setting Boot ROM Address make sure jumper JP1/A is closed. | | | |

| TECHNICAL NOTE |
|--|
| Note: The location of the 2 LEDs for network activity is unidentified. |