
## TURTLE BEACH SYSTEMS, INC. MULTISOUND/MONTEREY

Card Type Sound Card Chipset/Controller Unknown

I/O Options Game port, MIDI port, line in (4), speaker.

Maximum DRAM N/A

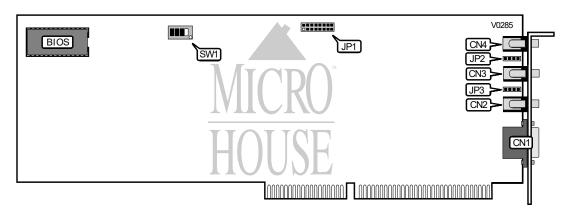

CONNECTIONS				
Purpos€	Location	Purpos :	Location	
MIDI port	CN1	Joystick adapter	JP1	
Speaker jack	CN2	Internal line in	JP2	
External line in (auxiliary)	CN3	Internal line in (auxiliary)	JP3	
External line in	CN4			
Note: Using internal connectors JP2 & JP3 disables external counterparts CN4 & CN3.				

I/O ADDRESS CONFIGURATION					
/ dress	S V1/1	S V1/2	S V1/3		
í 290h	On	On	On		
260h	Off	On	On		
250h	On	Off	On		
240h	Off	Off	On		
230h	On	On	Off		
220h	Off	On	Off		
210h	On	Off	Off		
3E0h	Off	Off	Off		

JOYSTICK CONFIGURATION			
Setting	SW1/4		
Enabled	On		
Disabled	Off		