


**TECMAR**  
**M-AUDIO CAPTURE & PLAYBACK ADAPTER**

<b>Card Type</b>	Sound Card
<b>Chipset/Controller</b>	Texas Instruments
<b>I/O Options</b>	Line in, line out
<b>Maximum DRAM</b>	128KB (location unknown)

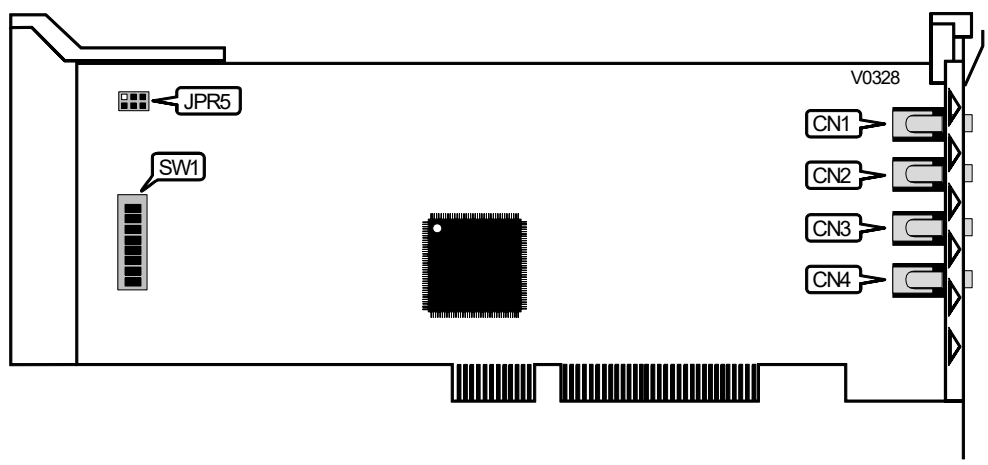

CONNECTIONS			
Purpose	Location	Purpose	Location
Line in (right)	CN1	Line out (left)	CN3
Line in (left)	CN2	Line out (right)	CN4

I/O ADDRESS CONFIGURATION								
Address	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8	SW1/9	SW1/10
310h	On	Off	On	On	On	Off	Off	On
318h	Off	Off	On	On	On	Off	Off	On
330h	On	Off	Off	On	On	Off	Off	On
338h	Off	Off	Off	On	On	Off	Off	On
368h	Off	On	Off	Off	On	Off	Off	On
710h	On	Off	On	On	On	Off	Off	Off
718h	Off	Off	On	On	On	Off	Off	Off
730h	On	Off	Off	On	On	Off	Off	Off
738h	Off	Off	Off	On	On	Off	Off	Off
768h	Off	On	Off	Off	On	Off	Off	Off
Note: SW1 is an eight-key switch, starting with key number 3 and ending with number 10 (as per manufacturer documentation).								

Continued on next page . . .

**TECMAR**  
**M-AUDIO CAPTURE & PLAYBACK ADAPTER**

... continued from previous page

INTERRUPT SELECT	
IRQ	JPR5
3	Pins 1 & 2, 3 & 4 closed
2	Pins 3 & 4 closed
4	Pins 5 & 6 closed
5	Pins 1 & 2, 5 & 6 closed
6	Pins 3 & 4, 5 & 6 closed
7	Pins 1 & 2, 3 & 4, 5 & 6 closed