


AST RESEARCH, INC.  
G-13 RAMPAGE PLUS 286 VER. II & III

Card Type	Memory Expansion
Chipset Controller	Unidentified
I/O Options	Feature Connector
Maximum Dram	8MB

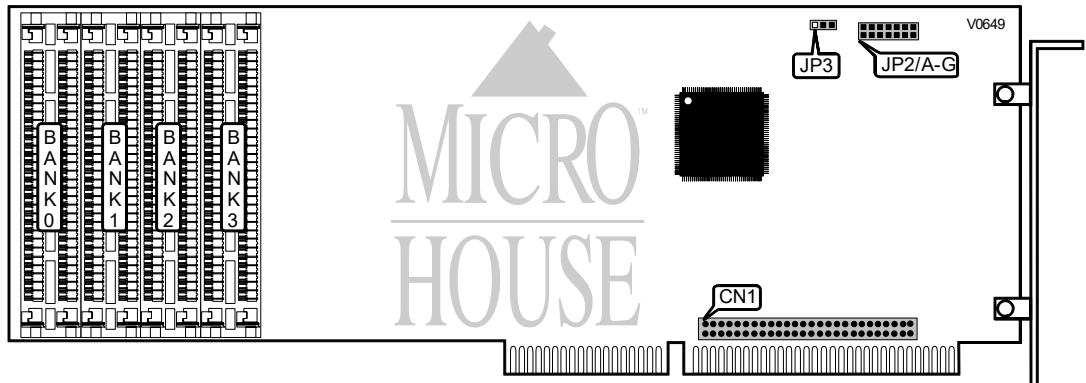

CONNECTIONS	
Purpose	Location
Feature Connector	CN1

DRAM CONFIGURATION				
Size	Bank 0	Bank 1	Bank 2	Bank 3
1024KB	(2) 256K x 9	(2) 256K x 9	NONE	NONE
2048KB	(2) 256K x 9	(2) 256K x 9	(2) 256K x 9	(2) 256K x 9
4096KB	(2) 1M x 9	(2) 1M x 9	NONE	NONE
8192KB	(2) 1M x 9	(2) 1M x 9	(2) 1M x 9	(2) 1M x 9

Continued on next page. . .

AST RESEARCH, INC.  
G-13 RAMPAGE PLUS 286 VER. II & III

...continued from previous page

DEFAULT CONFIGURATION TOGGLE	
Purpose	JP3
Configuration default toggle first position	Pins 2 & 3 closed
Configuration default toggle second position	Pins 1 & 2 closed
Note: This toggle functions as a clearing of the firmware on the board. If the jumper is first on Pins 2 & 3 then changing this jumper to Pins 1 & 2 will cause the firmware to be erased and default values to be loaded. This will then stay until the jumper is moved again.	

ADDRESS SELECT							
Address	JP2/A	JP2/B	JP2/C	JP2/D	JP2/E	JP2/F	JP2/G
0218h	Open	Open	Open	Open	Open	Closed	Open
0208h	Open	Open	Open	Open	Open	Open	Closed
0258h	Open	Open	Open	Open	Closed	Open	Open
0268h	Open	Open	Open	Closed	Open	Open	Open
02A8h	Open	Open	Closed	Open	Open	Open	Open
02B8h	Open	Closed	Open	Open	Open	Open	Open
02E8h	Closed	Open	Open	Open	Open	Open	Open