


MULTIWAVE INNOVATION  
AUDIOWAVE GREEN 16

Card Type	Sound Card
Chipset/Controller	ESS Audio Drive
I/O Options	CD Audio (3), CD-ROM interface (3), game/MIDI port, microphone jack, line in, line out, 6VDC output
Maximum DRAM	N/A

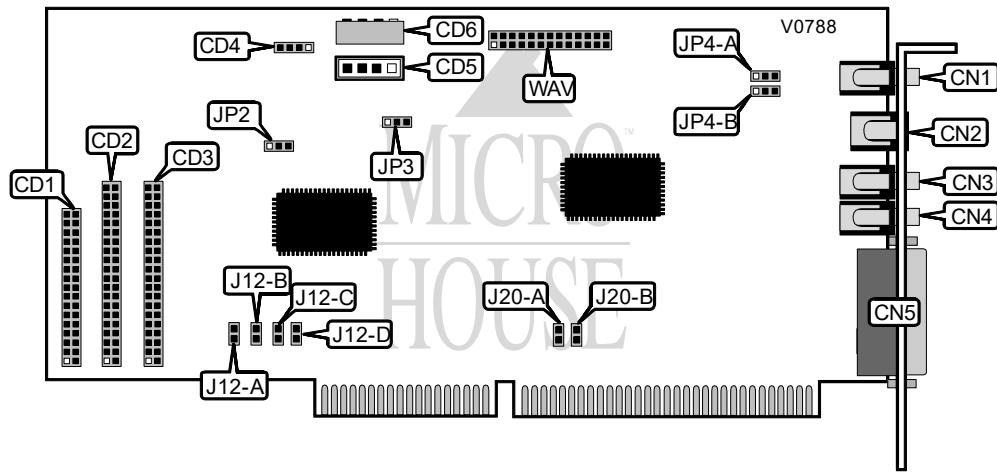

CONNECTIONS			
Purpose	Location	Purpose	Location
CD ROM interface - Sony	CD1	Line out	CN1
CD ROM interface - Mitsumi	CD2	6VDC output	CN2
CD ROM interface - Panasonic	CD3	Line in	CN3
CD audio - Sony	CD4	Microphone jack	CN4
CD audio - Mitsumi	CD5	Game/MIDI port	CN5
CD audio - Panasonic	CD6	Wavetable connector	WAV

I/O BASE ADDRESS SELECTION			
Address	J20/A	J20/B	
220h	Open	Open	
230h	Open	Closed	
240h	Closed	Open	
250h	Closed	Closed	

Continued on next page . . .

# MULTIWAVE INNOVATION

## AUDIOWAVE GREEN 16

...Continued from previous page

CD-ROM BASE ADDRESS SELECTION				
Address	J12/A	J12/B	J12/C	J12/D
i340h	Open	Closed	Open	Open
300h	Open	Open	Open	Open
310h	Open	Open	Open	Closed
320h	Open	Open	Closed	Open
330h	Open	Open	Closed	Closed
350h	Open	Closed	Open	Closed
360h	Open	Closed	Closed	Open
370h	Open	Closed	Closed	Closed
380h	Closed	Open	Open	Open
390h	Closed	Open	Open	Closed
3A0h	Closed	Open	Closed	Open
3B0h	Closed	Open	Closed	Closed
3E0h	Closed	Closed	Open	Open

CD-ROM TYPE SELECTION	
Type	JP2
iMitsumi	pins 2 & 3 closed
Panasonic	pins 1 & 2 closed
Sony	pins 2 & 3 closed

GAME PORT CONFIGURATION	
Setting	JP3
iEnabled	pins 1 & 2 closed
Disabled	pins 2 & 3 closed

AUDIO LINE CONFIGURATION		
Settin	JP4/A (Left audio)	JP4/B (Right audio)
iSpeaker out	pins 2 & 3 closed	pins 2 & 3 closed
Line out	pins 1 & 2 closed	pins 1 & 2 closed