


EQUINOX SYSTEMS, INC.  
SST HOST CONTROLLER BOARD

Category	Serial controller
Chipset Controller	Equinox Systems, Inc.
I/O Options Supported	Up to 128 serial ports
Maximum Onboard Memory	N/A

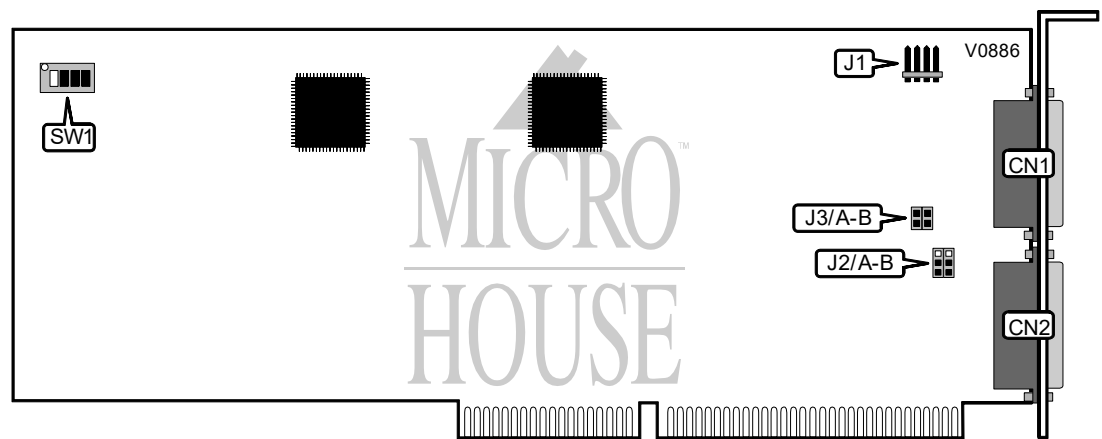

CONNECTIONS			
Purpose	Location	Purpose	Location
RS-232 interface (ports 65-128) - DB-25	CN1	Power connector	J1
RS-232 interface (ports 1-64) - DB-25	CN2		

EXPANSION MODULE POWER SOURCE SELECT				
Power Source	J2/jumper A	J2/jumper B	J3/jumper A	J3/jumper B
If CN2 powered by main board CN1 powered through J1	All pins open	All pins open	Open	Open
All ports powered by main board	Pins 2 & 3 closed	Pins 2 & 3 closed	Closed	Closed

Continued on next page. . .

EQUINOX SYSTEMS, INC.  
SST HOST CONTROLLER BOARD

...continued from previous page

I/O ADDRESS				
Address	SW1/1	SW1/2	SW1/3	SW1/4
200h	Off	Off	Off	Off
220h	On	Off	Off	Off
240h	Off	On	Off	Off
260h	On	On	Off	Off
280h	Off	Off	On	Off
2A0h	On	Off	On	Off
2C0h	Off	On	On	Off
2E0h	On	On	On	Off
300h	Off	Off	Off	On
320h	On	Off	Off	On
340h	Off	On	Off	On
360h	On	On	Off	On
380h	Off	Off	On	On
3A0h	On	Off	On	On
3C0h	Off	On	On	On
3E0h	On	On	On	On