


OAK TECHNOLOGIES INC. MOZART SOUND CARD

Card Type	Sound card
Chipset Controller	Oak Technologies Inc.
I/O Options	CD audio in, Game/MIDI port, headphone/ line out (2), line in (2), mic in (2), mono speaker out, speaker out(2), CD-ROM interfaces (4)
Maximum DRAM	N/A

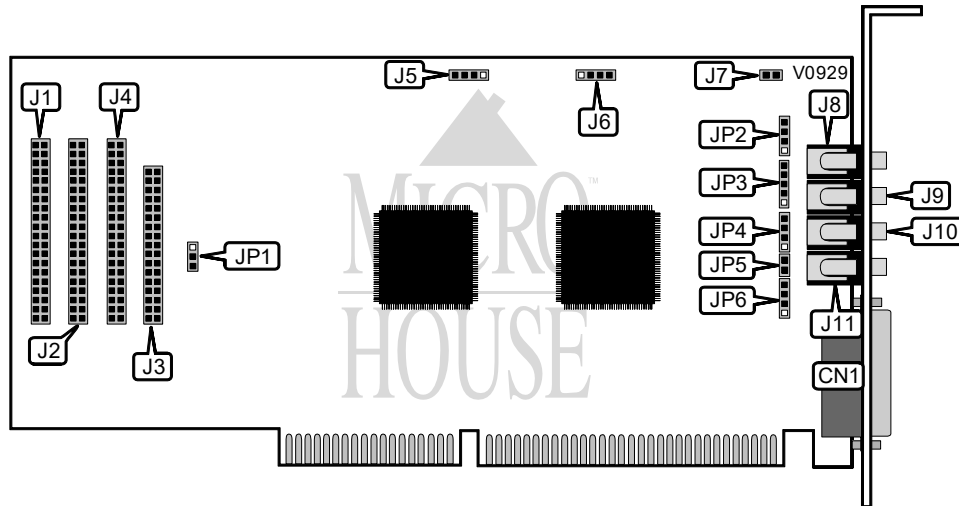

CONNECTIONS			
Purpose	Location	Purpose	Location
Game/MIDI port	CN1	Speaker out	J8
Panasonic CD-ROM interface	J1	Headphone/ line out	J9
IDE CD-ROM interface	J2	Line in	J10
Sony CD-ROM interface	J3	Microphone in	J11
Mitsumi CD-ROM interface	J4	Speaker out	JP2
CD audio in	J5	Headphone/ line out	JP3
PC buzzer	J6	Line in	JP4
Mono speaker out	J7	Microphone in	JP6

CD-ROM TYPE SELECTION	
Type	JP1
Other(Panasonic, Sony, IDE)	Pins 1 & 2 closed
Mitsumi	Pins 2 & 3 closed

POWER MICROPHONE CONFIGURATION	
Setting	JP5
Enabled	Open
Disabled	Closed